

# BRACKET E-6

BRACKET E-6 is part of the **BRACKET E** ceiling-and-wall mount distance holder.

The sensor is mounted at two points of the BRACKET E holder: to the **BRACKET E-4 (GY)** base and to the **BRACKET E-2A (GY)** insert or the **BRACKET E-5 (GY)** ball-joint holder.

