

CR Soft

CR Soft is used to program the settings of access control devices provided with the MIFARE® card readers (**SO-MF5**, **SO-MF-3**, **CR-MF5** and **CR-MF-3**). It is also designed for programming MIFARE cards – the **SO-PRG** programmer is required.

- compatible with Windows 7/8/10/11
- programming of devices with the MIFARE® reader: **SO-MF5**, **SO-MF-3**, **CR-MF5**, **CR-MF3**
- compatible with the **SO-PRG** card programmer
 - programming of MIFARE® cards – IDs and **MC-SRV-8** service cards
 - reading of MIFARE® card data