

Система контроля доступа

АССО NET

Инструкция по установке

acco_net_i_ru 04/16

SATEL sp. z o.o.
ул. Budowlanych 66
80-298 Gdańsk
POLAND
тел. +48 58 320 94 00
www.satel.eu

Компания SATEL ставит своей целью постоянное совершенствование качества своих изделий, что может приводить к изменениям в технических характеристиках и программном обеспечении. Информацию о введенных изменениях Вы можете найти на веб-сайте:
<http://www.satel.eu>

В руководстве используются следующие обозначения:



- примечание;



- важная информация предупредительного характера.

СОДЕРЖАНИЕ

1. Введение.....	2
2. Компоненты программного обеспечения.....	2
3. Архитектура системы	3
4. Требования к сети	4
5. Минимальные аппаратные требования.....	4
6. Установка программного обеспечения системы ACCO NET.....	5
6.1 Установка операционной системы Debian	5
6.2 Установка серверной среды и системы ACCO NET	18
6.3 Установка программы ACCO-NT Conf / ACCO Soft	33
7. Настройка.....	33
7.1 ACCO Server и программа ACCO Soft.....	33
7.2 Приложение ACCO-WEB.....	34
7.3 Полезные команды	35
8. Обновление программного обеспечения системы ACCO NET.....	35

1. Введение

Задачей системы контроля доступа ACCO NET является защита объектов от доступа неуполномоченных лиц. Система ACCO NET состоит из программного обеспечения и устройств компании SATEL (сетевых контроллеров, модулей контроля доступа, модулей расширения, клавиатур, считывателей бесконтактных карт и пр.).

В настоящем руководстве можно найти информацию, связанную с конфигурацией программного обеспечения, которое позволяет настраивать и администрировать систему. Система может охватывать большое число объектов с любым количеством сетевых контроллеров. Связь с сетевыми контроллерами осуществляется по Ethernet-сети.

2. Компоненты программного обеспечения

Для работы системы ACCO NET необходима операционная система Debian. Описание установки системы Debian можно найти в дальнейшей части настоящего руководства. Если эта система уже установлена, то этот раздел руководства можно пропустить.

Программное обеспечение, необходимое для правильной работы системы, поставляется в виде установочного пакета, который включает в себя:

1. программное обеспечение для создания серверной операционной среды. Оно не разрабатывалось компанией SATEL (в скобках можно найти ссылки для загрузки лицензии к каждой из этих программ):
 - Apache (<http://www.apache.org/licenses/LICENSE-2.0.html>),
 - PHP (http://php.net/license/3_01.txt),
 - MySQL (<http://www.gnu.org/licenses/gpl-2.0.html>),
 - Java (<http://www.gnu.org/licenses/gpl-2.0.html>),
 - ModSecurity (<http://www.apache.org/licenses/LICENSE-2.0.html>),
 - Fail2Ban (<http://www.gnu.org/licenses/gpl-2.0.html>);




Следует помнить о том, что установленная серверная операционная среда, требуемая системой, должна быть легальной, о чем необходимо позаботиться самостоятельно.

Если эти программы уже установлены, можно пропустить их установку.

2. программное обеспечение системы контроля и управления доступом ACCO NET:
 - ACCO Server – программа, позволяющая обмениваться данными между сетевыми контроллерами, базой данных и программой ACCO Soft, а также ACCO-WEB,
 - ACCO DB – база данных, в которую записываются все данные, касающиеся системы: настройка и события,
 - ACCO-WEB – приложение для управления и удаленного администрирования системы,
 - ACCO-NT Conf – установочный файл программы для конфигурации сетевых настроек сетевого контроллера (более подробную информацию об этой программе можно найти в руководстве по установке сетевого контроллера ACCO-NT),
 - ACCO Soft – установочный файл программы для настройки системы.

3. Архитектура системы

Система ACCO NET может быть установлена на одном компьютере. Также можно ее разделить на несколько рабочих станций и применить архитектуру распределенной вычислительной среды для системы. Приложение ACCO Soft, предназначенное для настройки системы, может быть установлено на нескольких рабочих станциях. Для использования приложения ACCO-WEB, предназначенного для удаленного администрирования системы, достаточен веб-браузер, установленный на компьютере, смартфоне или планшете. Примерная система ACCO NET представлена на нижеследующем рис. 1.

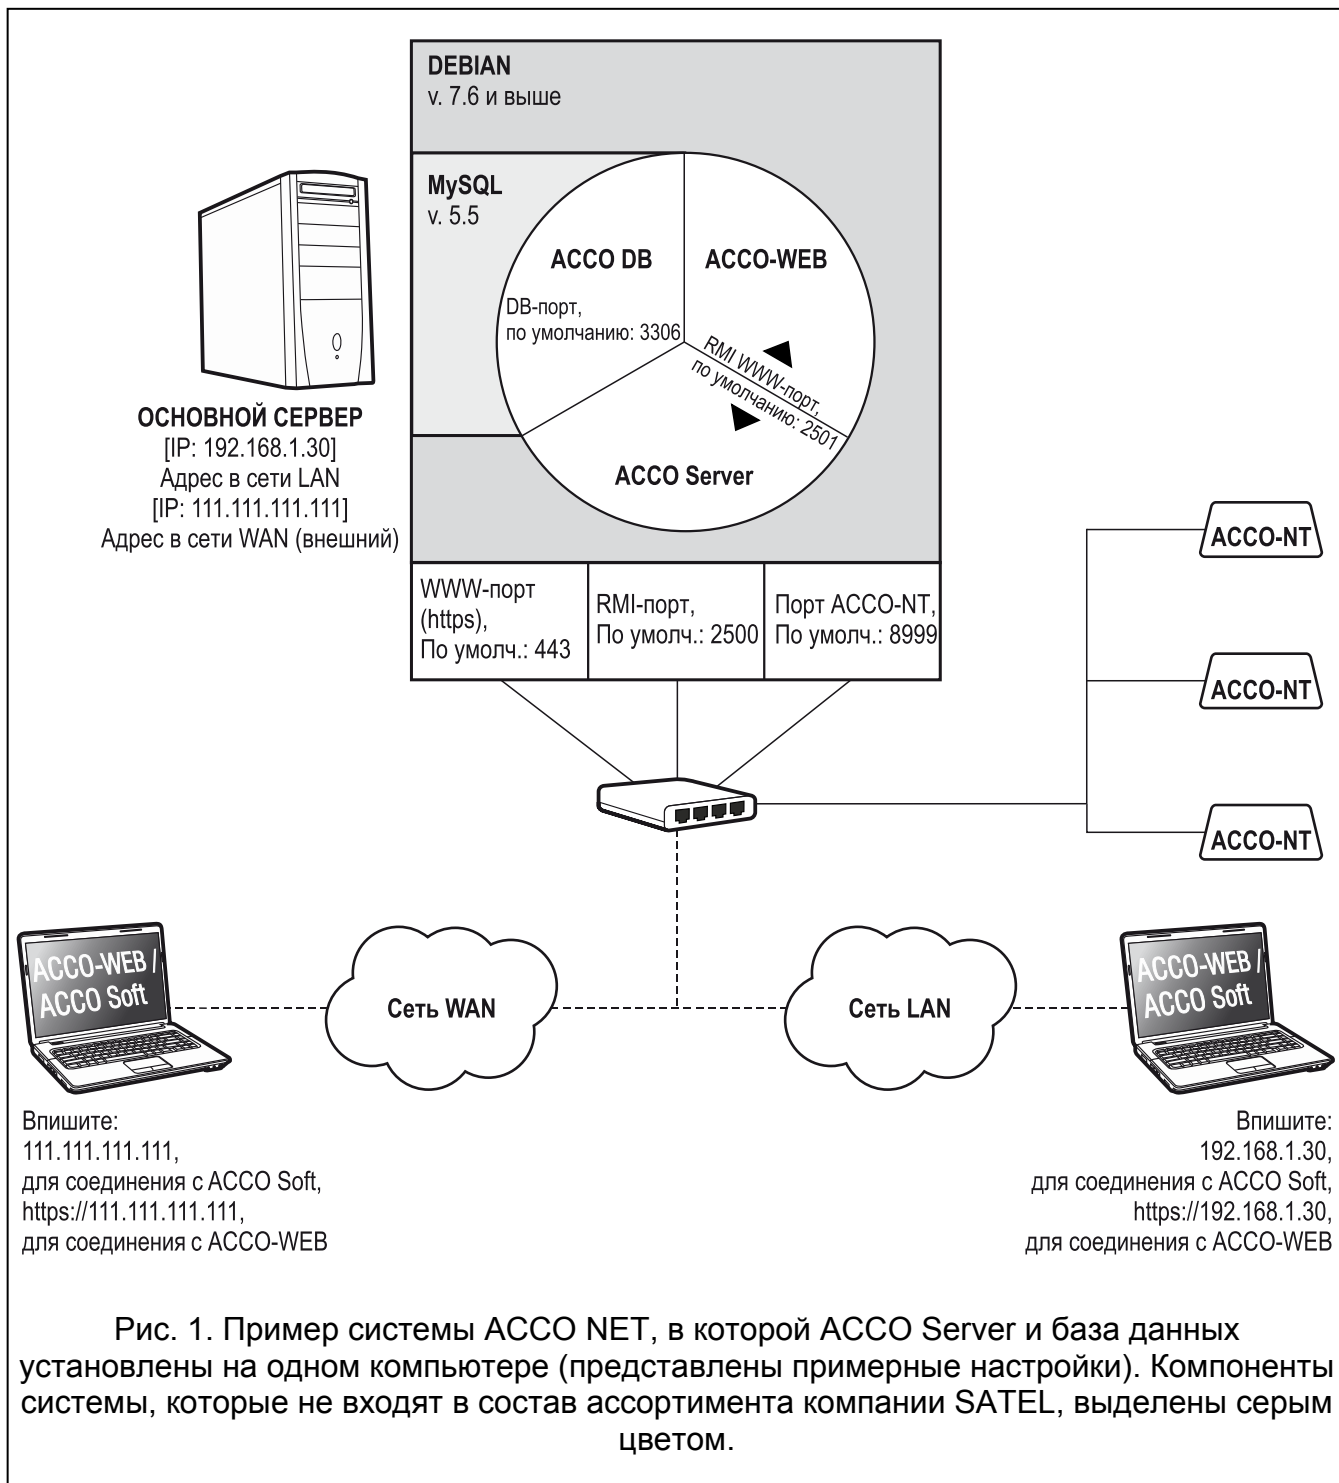

4. Требования к сети

- Протокол версии 4 (TCP/IPv4).
- IP-адрес для каждого подключенного сетевого контроллера ACCO-NT.
- Если к приложению ACCO-WEB должен быть обеспечен доступ из другой подсети, то порт WWW (https; по умолчанию: 443) для осуществления связи между ACCO Server и приложением ACCO-WEB должен быть перенаправлен.
- Если к программе ACCO Soft должен быть обеспечен доступ из другой подсети, то следующие порты должны быть перенаправлены:
 - порт RMI (по умолчанию: 2500) для осуществления связи между ACCO Server и программой ACCO Soft,
 - порт DB (по умолчанию: 3306) для осуществления связи между ACCO Server и базой данных.



Несмотря на факт использования компанией SATEL стандартных способов шифрования (SSL), в случае подключения системы ACCO NET к внешней сети, следует предпринять и дополнительные меры безопасности – использовать, например, сетевой экран (файервол) и систему обнаружения и предотвращения вторжений (IDS/IPS).

5. Рекомендуемые аппаратные требования

Аппаратные требования для компьютера, на котором будет установлена СКУД ACCO NET, зависят от размера системы:

пример системы 1 (1 сетевой контроллер ACCO-NT, 30 модулей контроля доступа, 30 пользователей)

- дисковый массив RAID 1 (RAID 1 требует установки 2 дисков),
- 4 ГБ RAM-памяти,
- процессор: Intel Core i3 или AMD A4,
- сетевая плата стандарта Fast Ethernet,
- операционная система Debian (версия 7.6 или выше);

пример системы 2 (3 сетевых контроллера ACCO-NT, 100 модулей контроля доступа, 300 пользователей)

- дисковый массив RAID 5 (RAID 5 требует установки 3 дисков),
- 8 ГБ RAM-памяти,
- процессор: Intel Xeon или AMD Opteron,
- сетевая плата стандарта Fast Ethernet,
- операционная система Debian (версия 7.6 или выше).



Размер устанавливаемых дисков следует выбрать в зависимости от:

- количества событий, сформированных в системе (от 2 до 5 миллионов событий занимает 1 ГБ),
- количества пользователей, которые пользуются одновременно программой ACCO Soft или приложением ACCO-WEB,
- размеров графических файлов, назначенных картам,
- размеров фотографий пользователей,
- длины, определенных названий объектов, сетевых контроллеров, модулей контроля доступа, модулей расширения, разделов и пользователей.

6. Установка программного обеспечения системы ACCO NET

6.1 Установка операционной системы Debian



Рекомендуется устанавливать операционную систему Debian на компьютере, на котором в данный момент не установлена другая операционная система.


Компьютер или компьютеры, на которых будет устанавливаться система ACCO NET и база данных, должны быть подключены к Интернету.

Требуется версия системы Debian 7.6 или более поздняя. Ниже следует описание установки операционной системы Debian на примере версии 8.0.


1. На сайте <https://www.debian.org/releases/jessie/debian-installer/> среди образов CD-диска «netinst» (150-280 МБ, в зависимости от архитектуры) выберите соответствующий образ и запишите его на диске. После загрузки образа ISO запишите его на CD-диск.
2. Установите в привод компьютера записанный CD-диск. Откроется экран приветствия системы Debian.
3. Выберите команду «Install» и нажмите ENTER.




4. Выберите язык для проведения установки и нажмите ENTER.

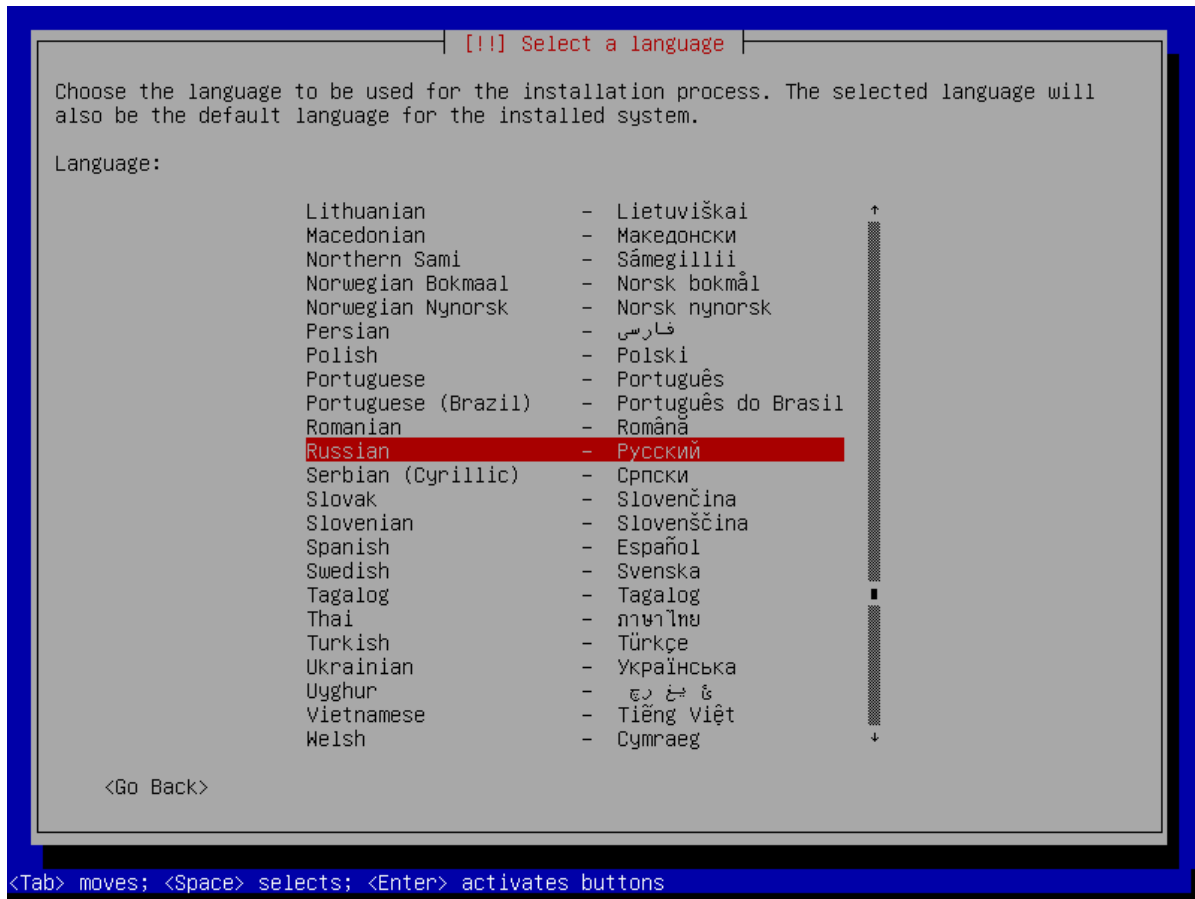

5. Выберите местонахождение и нажмите ENTER.

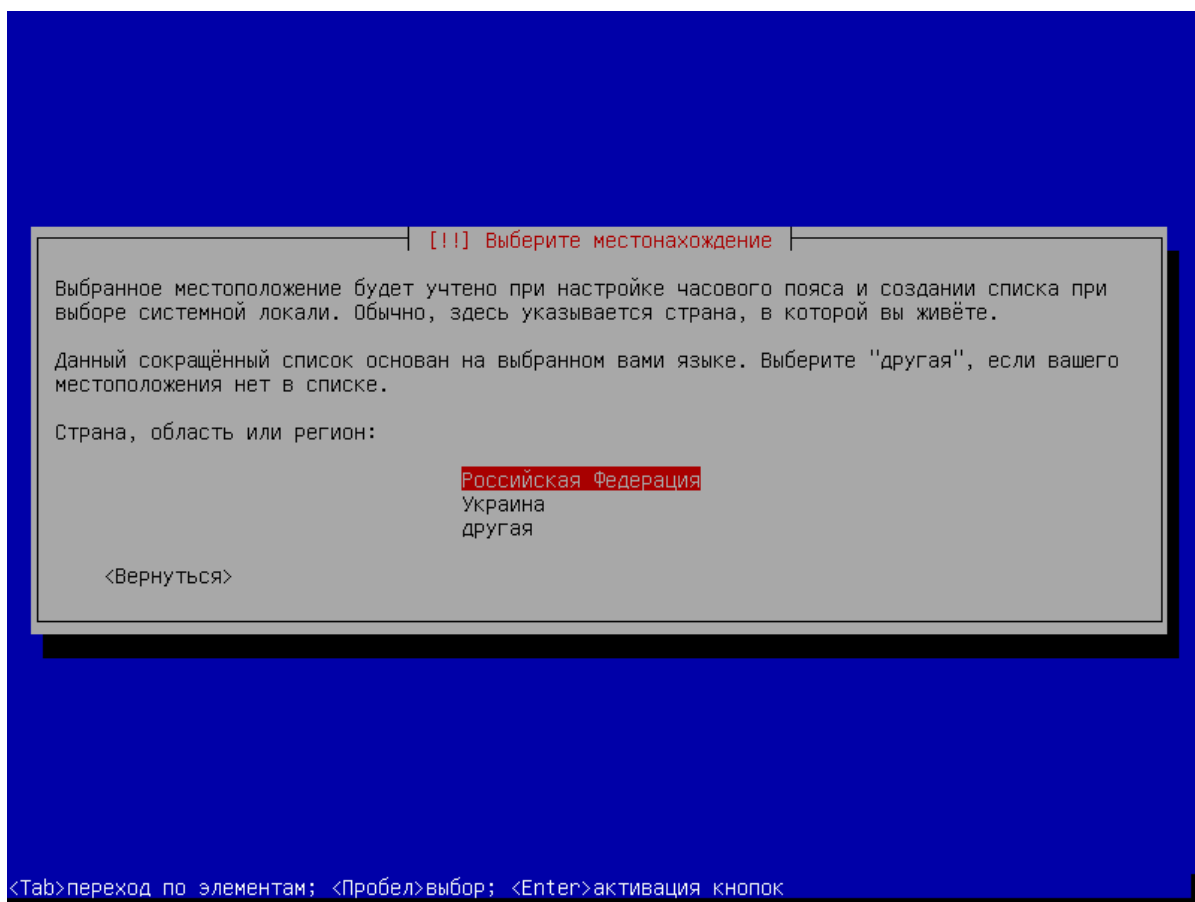


6. Выберите язык для раскладки клавиатуры и нажмите ENTER.

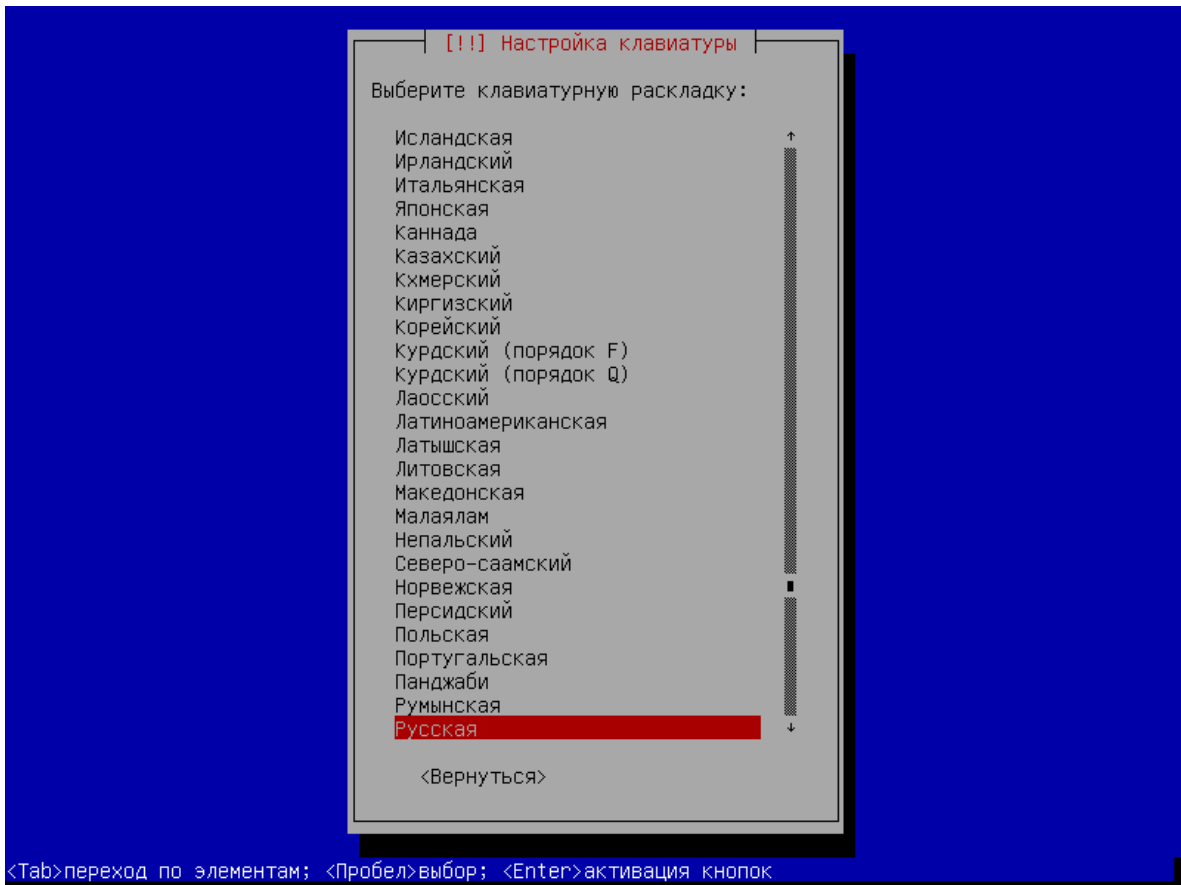


7. По очереди будут отображаться окна с информацией о прогрессе процесса установки.


8. Настройте сеть, вписав имя компьютера, и нажмите ENTER.

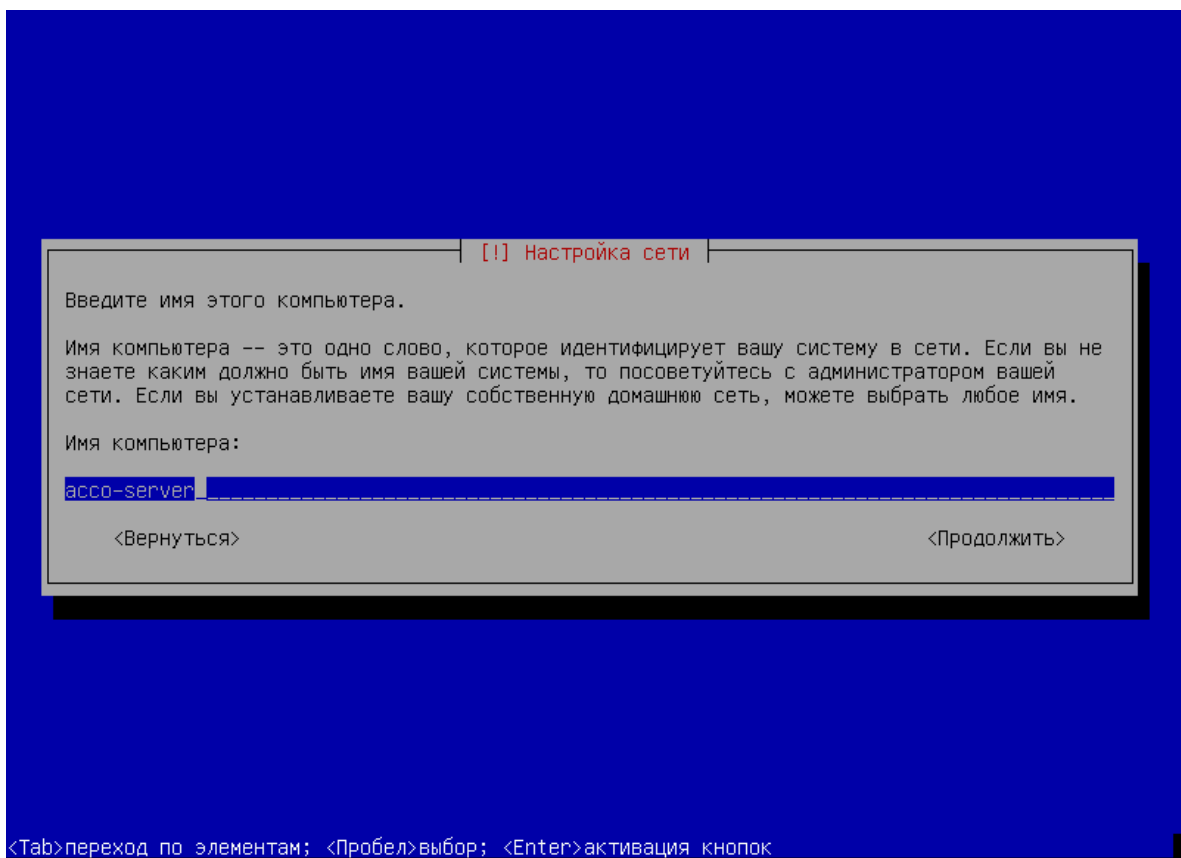


9. Впишите имя домена и нажмите ENTER.

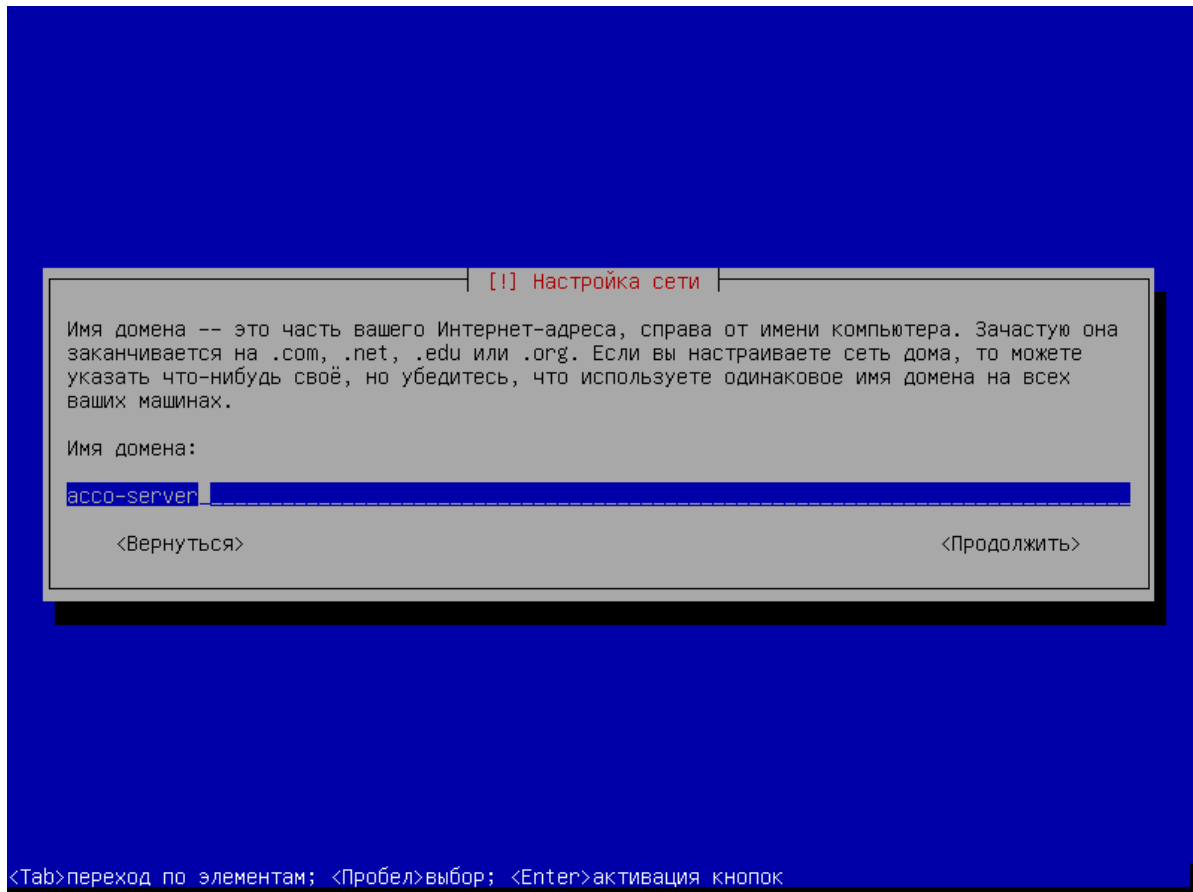


10. Задайте для администратора, то есть суперпользователя (login: root), пароль доступа к системе и нажмите ENTER.

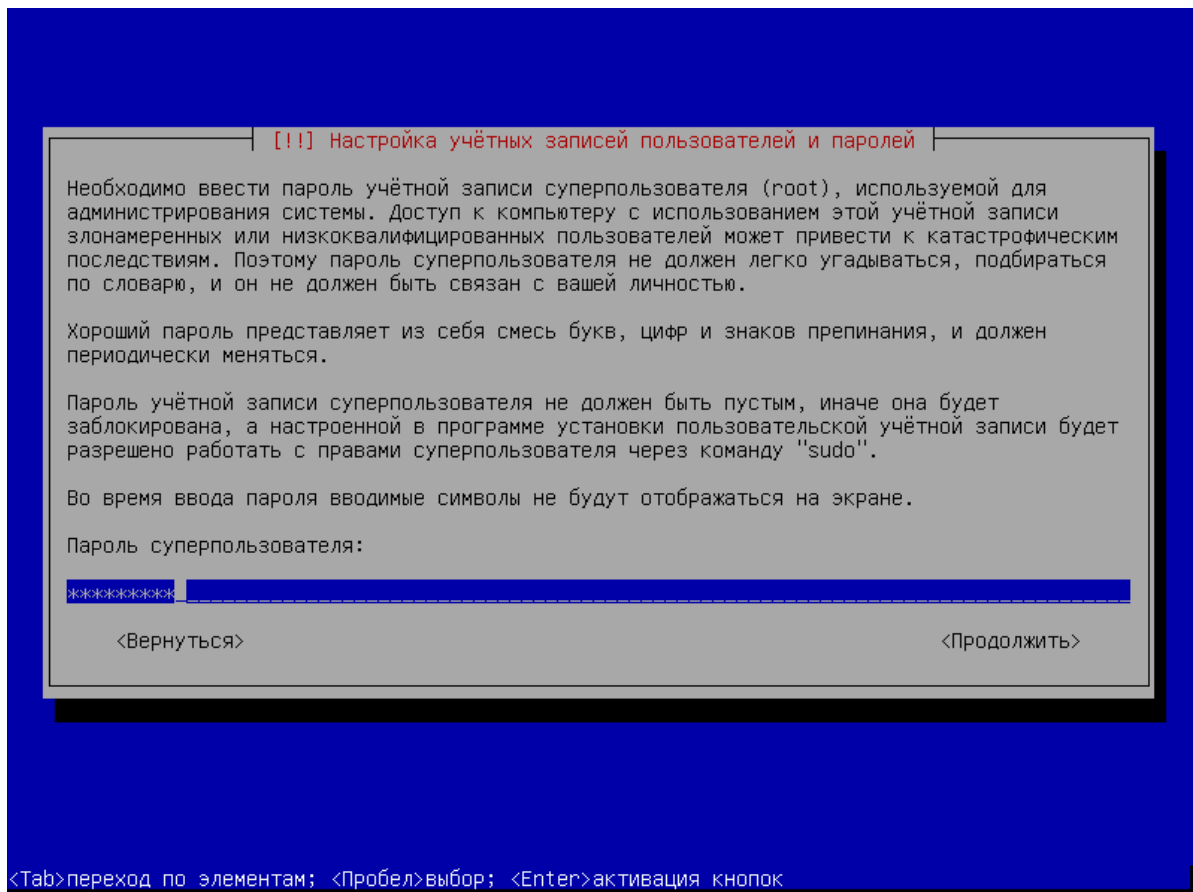


11. Повторите пароль и нажмите ENTER.

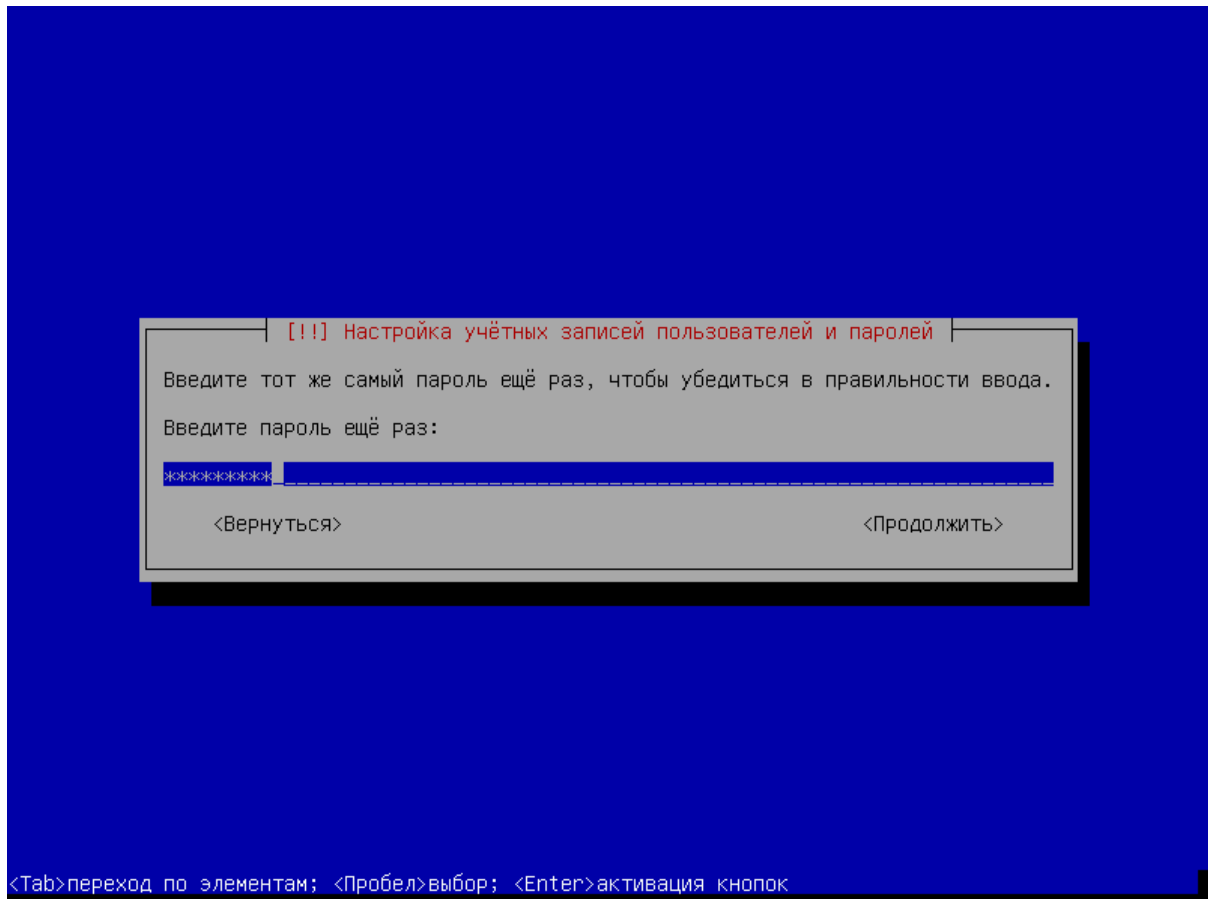


12. Назначьте пользователю имя (Ваш дополнительный аккаунт) и нажмите ENTER.

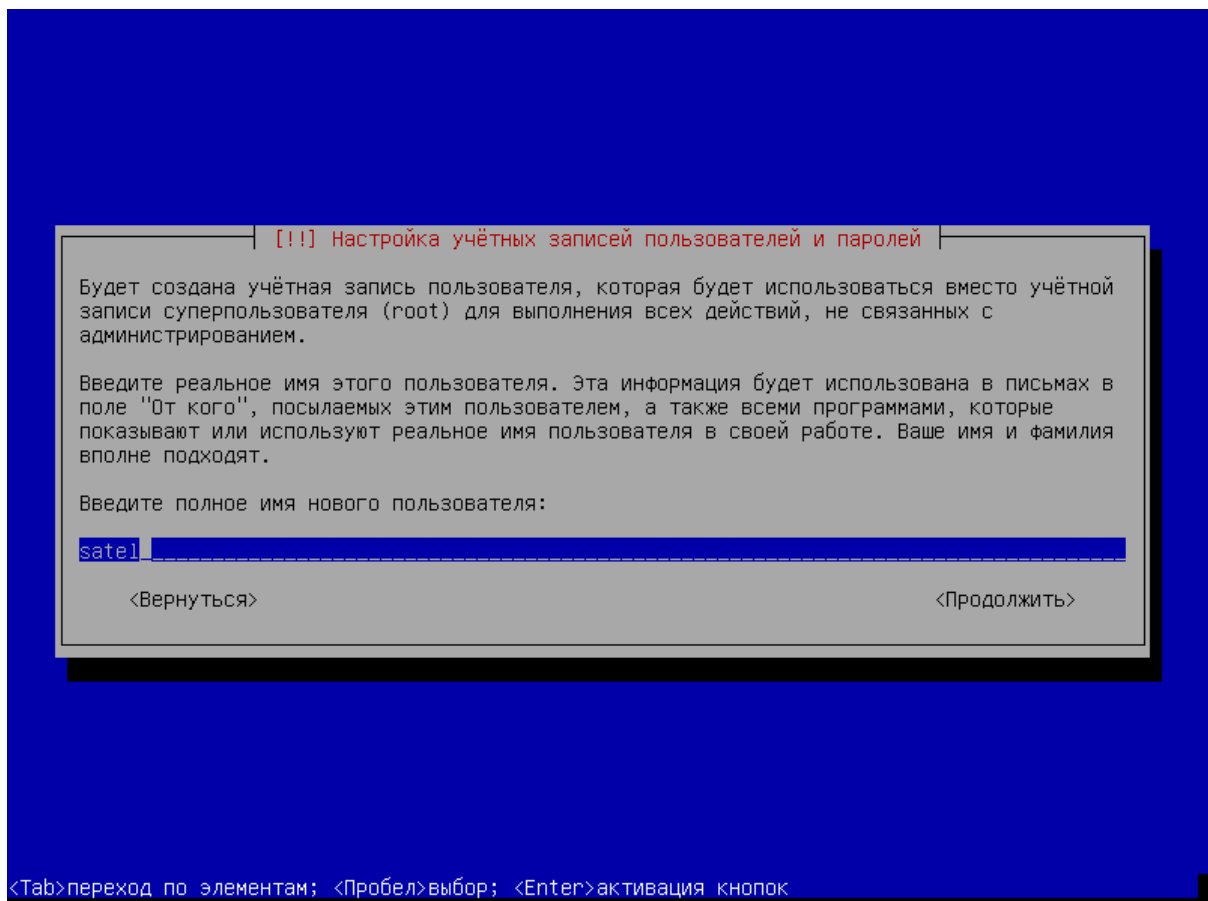


13. Впишите пароль для нового пользователя и нажмите ENTER.

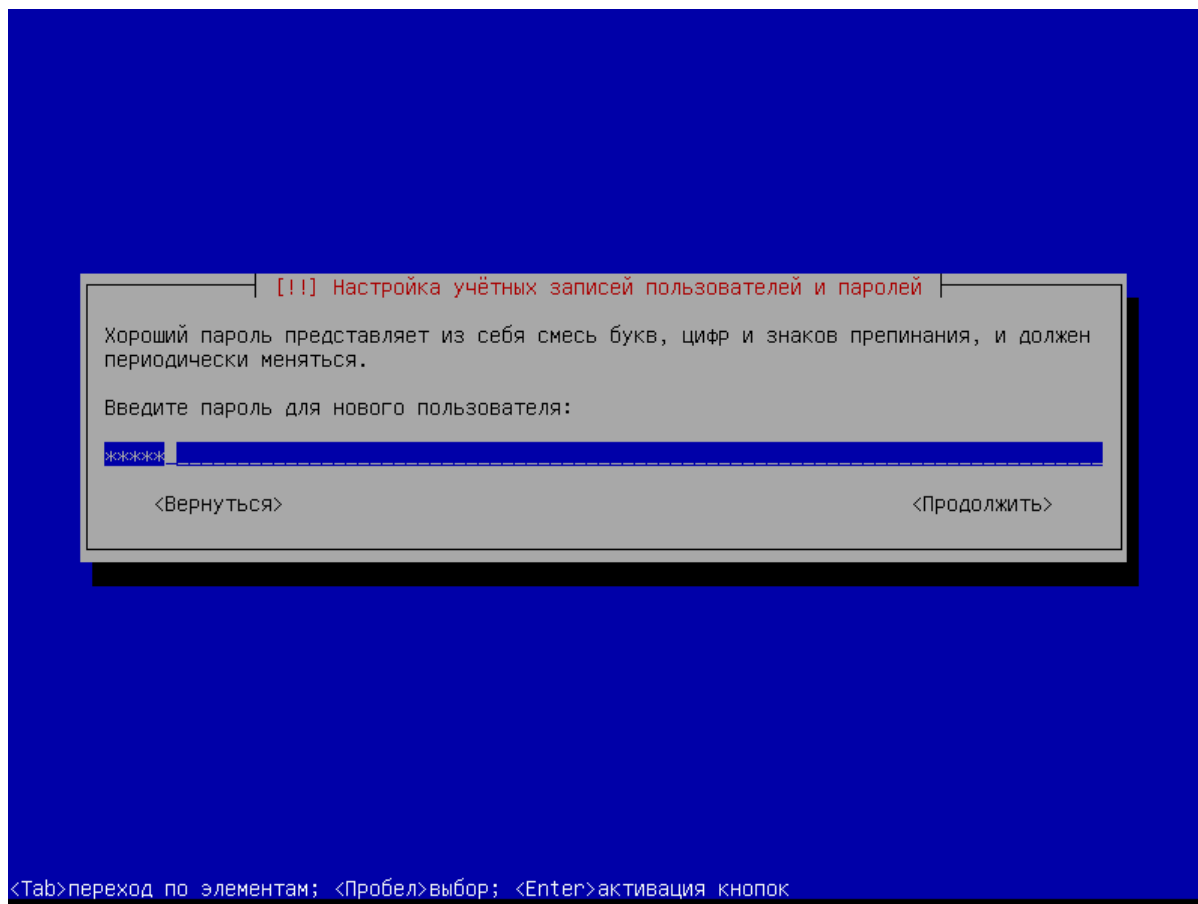


14. Повторите пароль и нажмите ENTER.

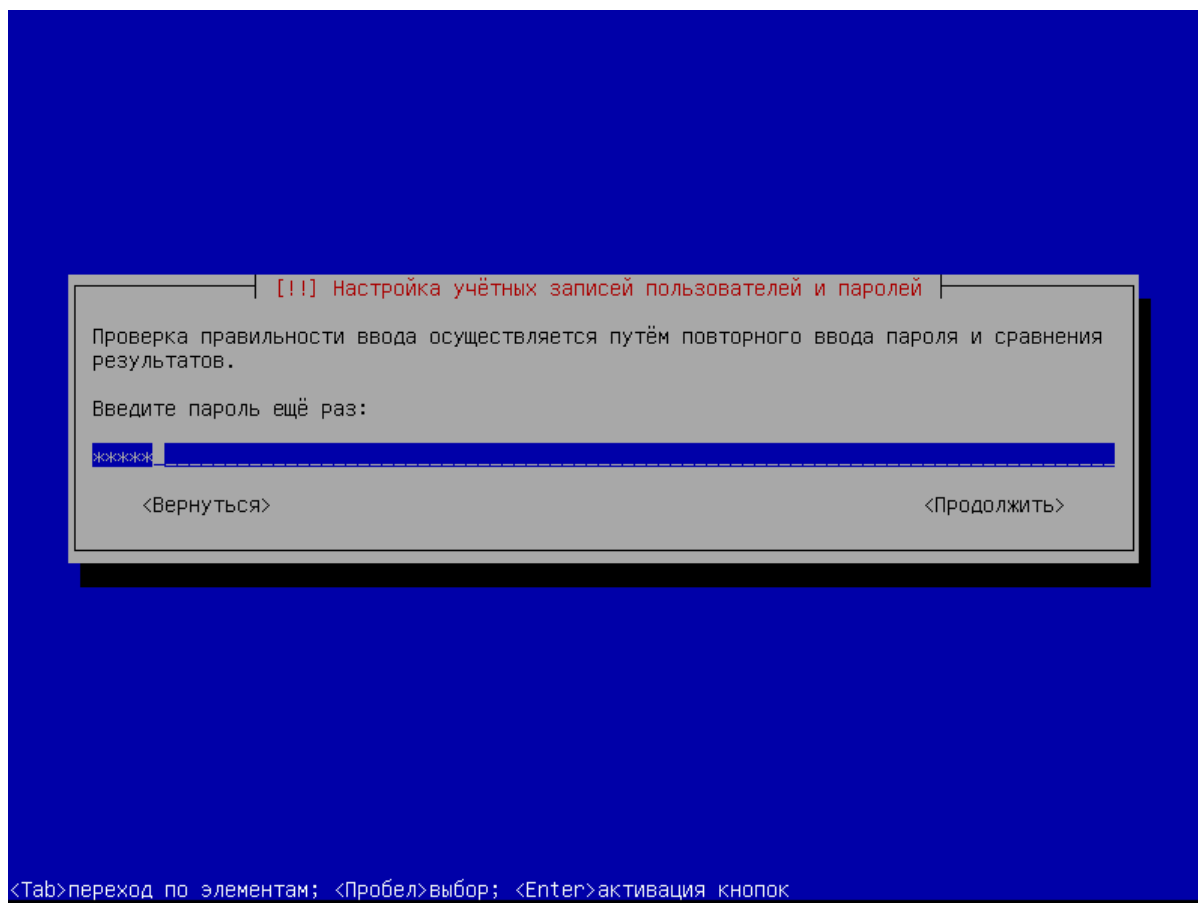


15. На этапе разделения диска выберите опцию «Авто – использовать весь диск» и нажмите ENTER.

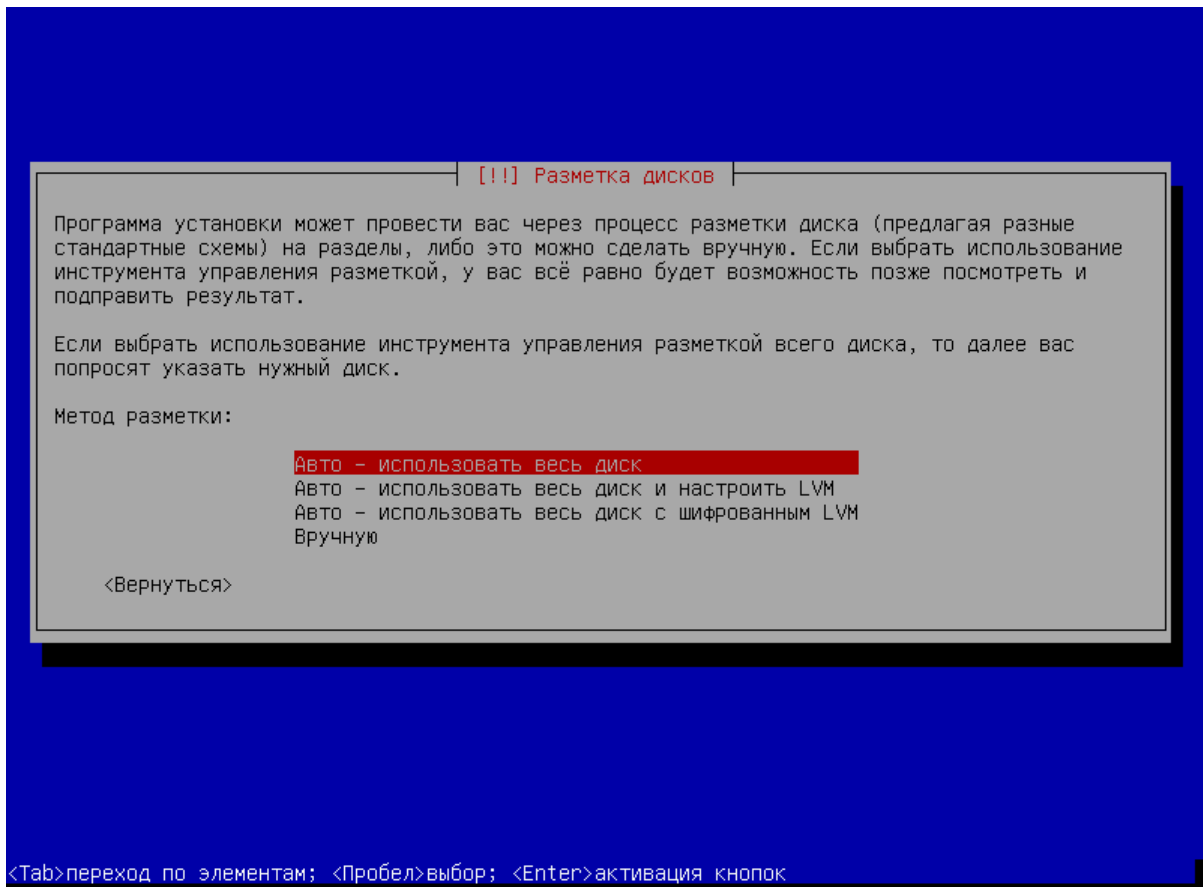


16. Когда будет отображен запрос на выбор диска для разбивки на разделы, нажмите ENTER.

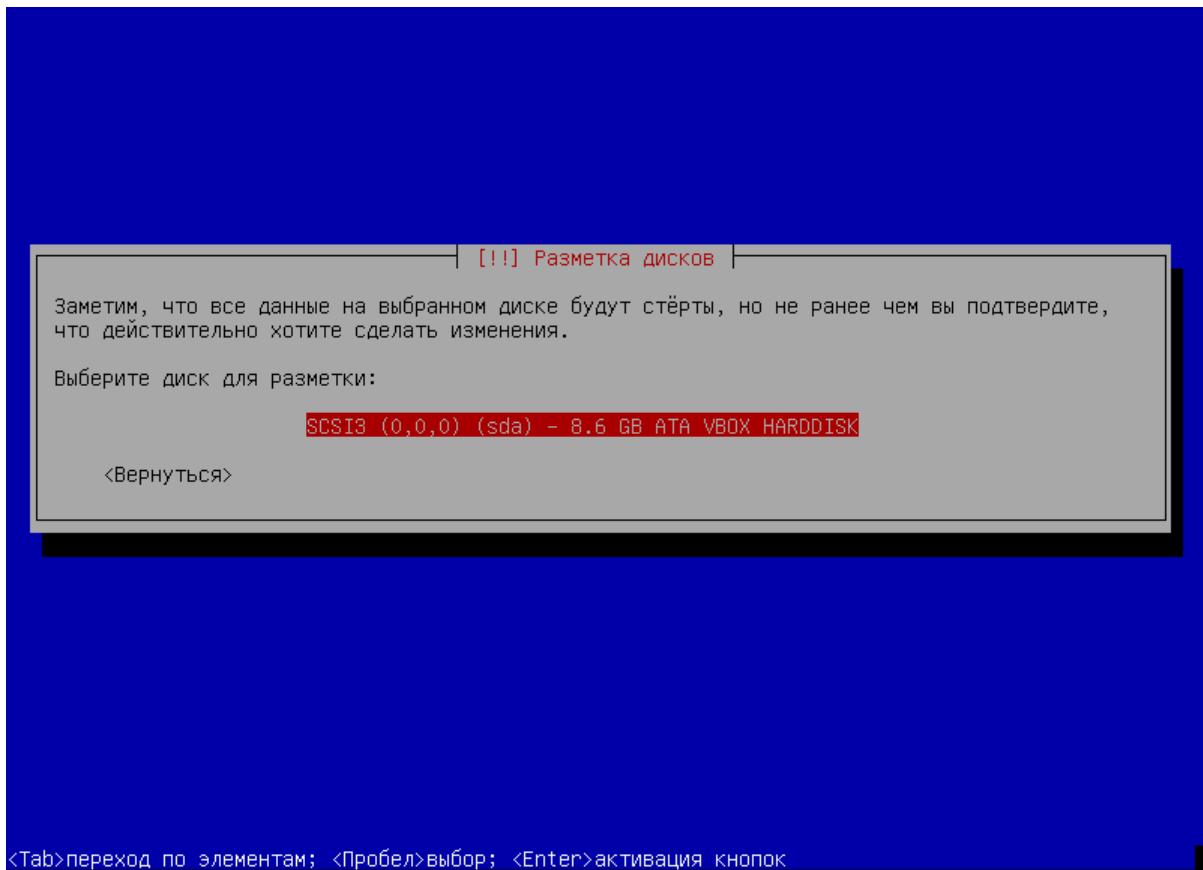


17. Выберите метод создания разделов «Все файлы на одном разделе (рекомендуется новичкам)» и нажмите ENTER.

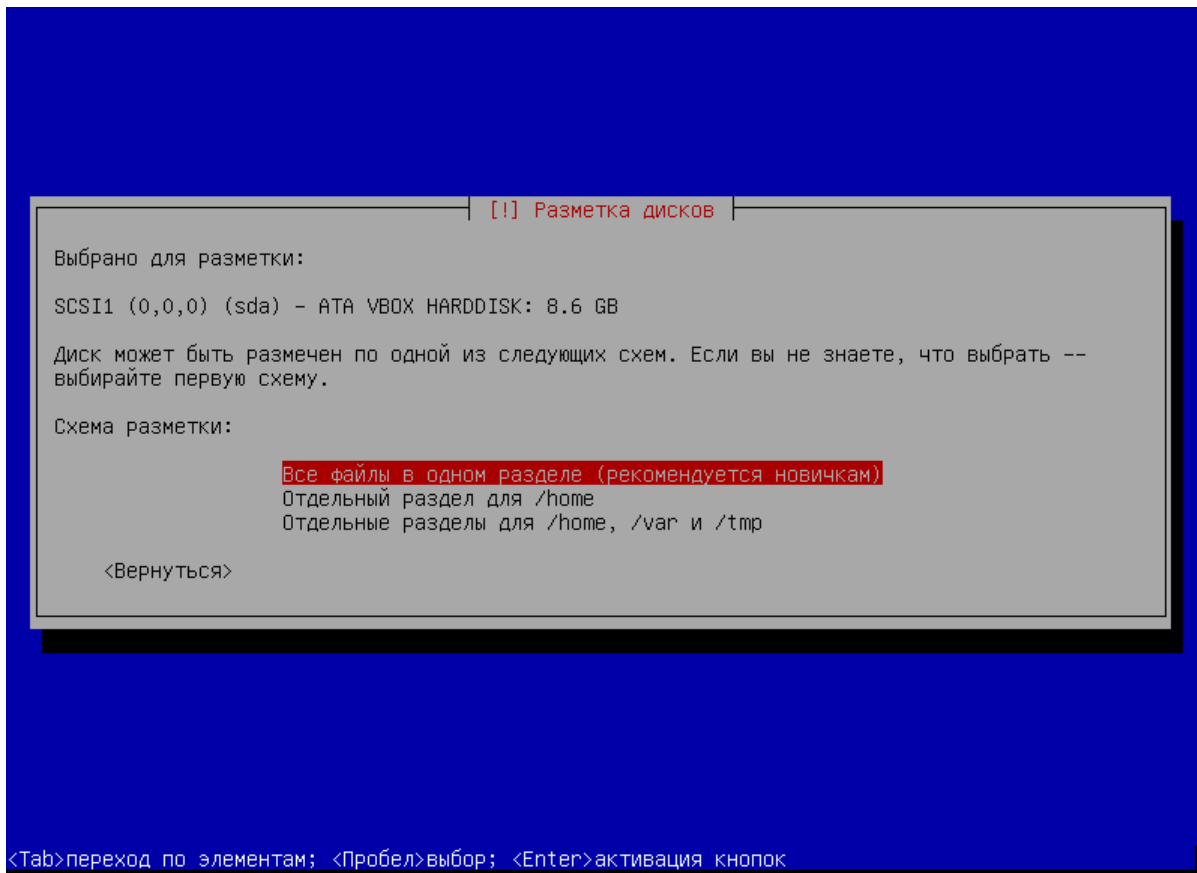


18. Выберите опцию «Закончить разметку и записать изменения на диск» и нажмите ENTER.

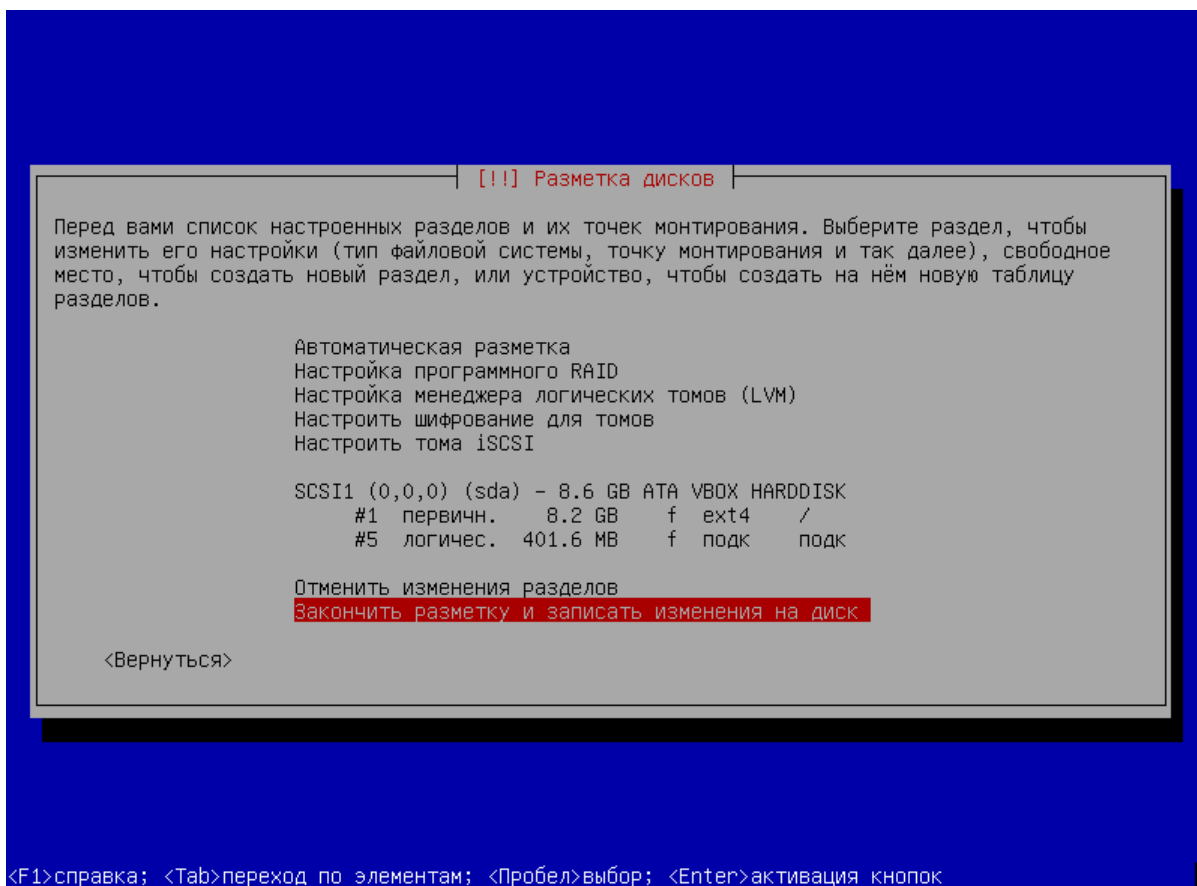


19. Когда появится вопрос о сохранении данных, выберите «Да» и нажмите ENTER.

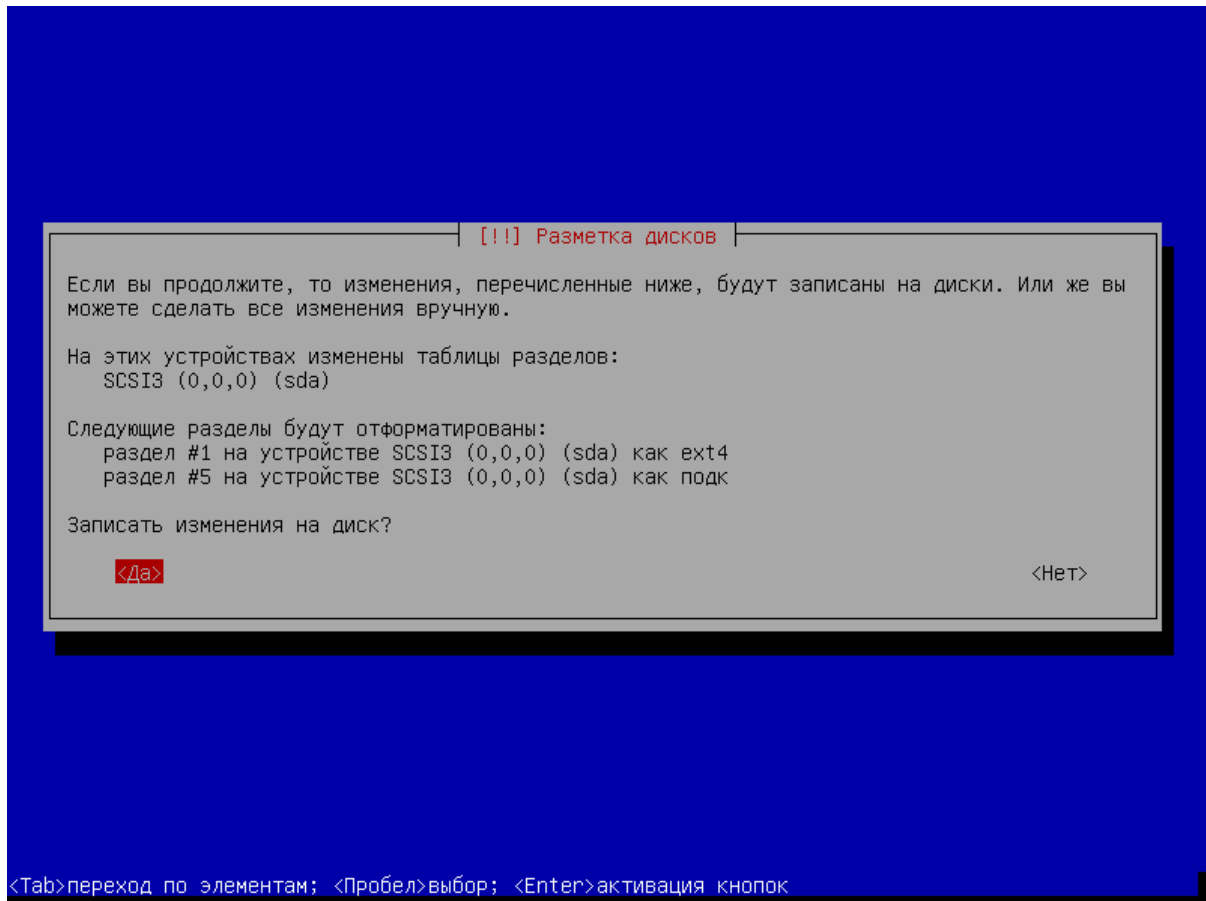


20. Выберите страну для зеркала (HTTP-прокси) и нажмите ENTER.

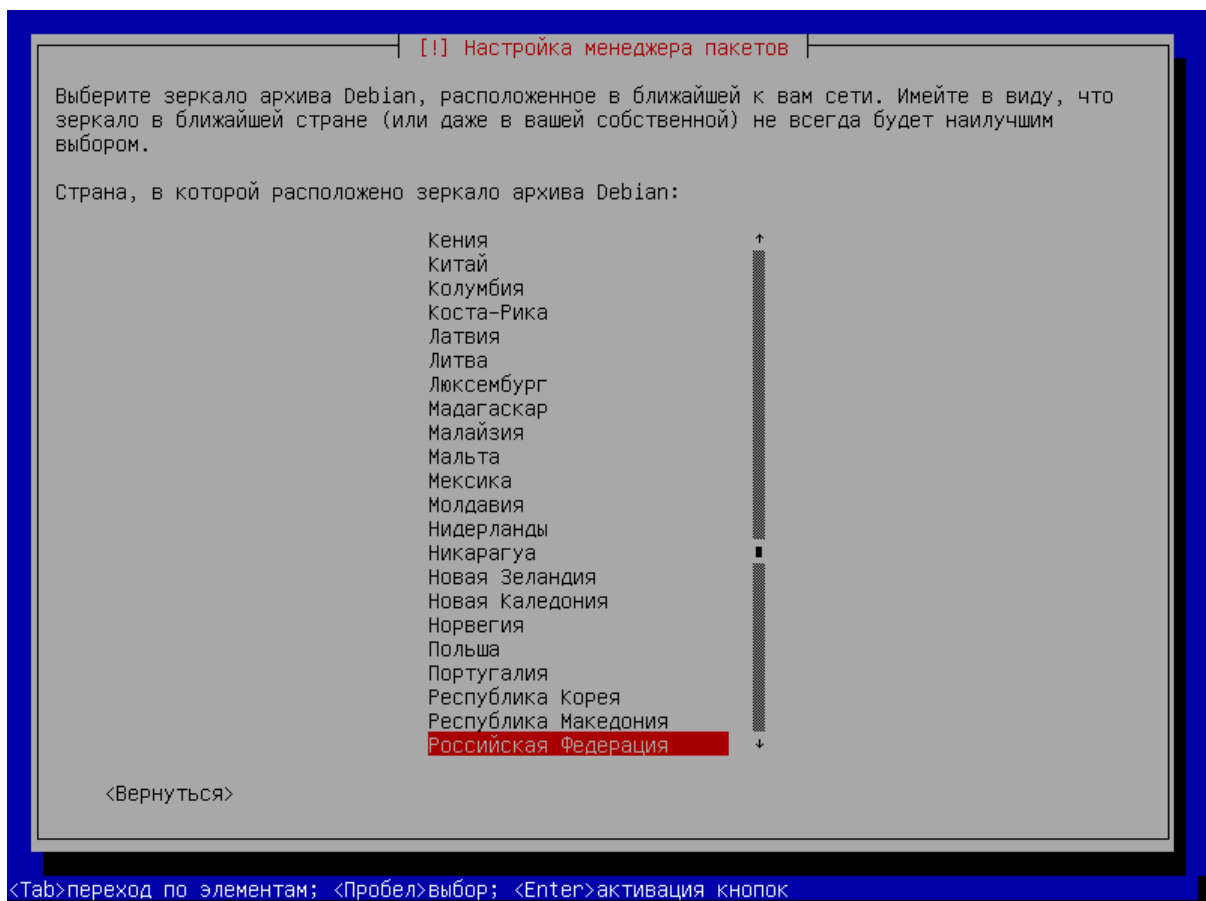

21. Выберите название архива для зеркала и нажмите ENTER.

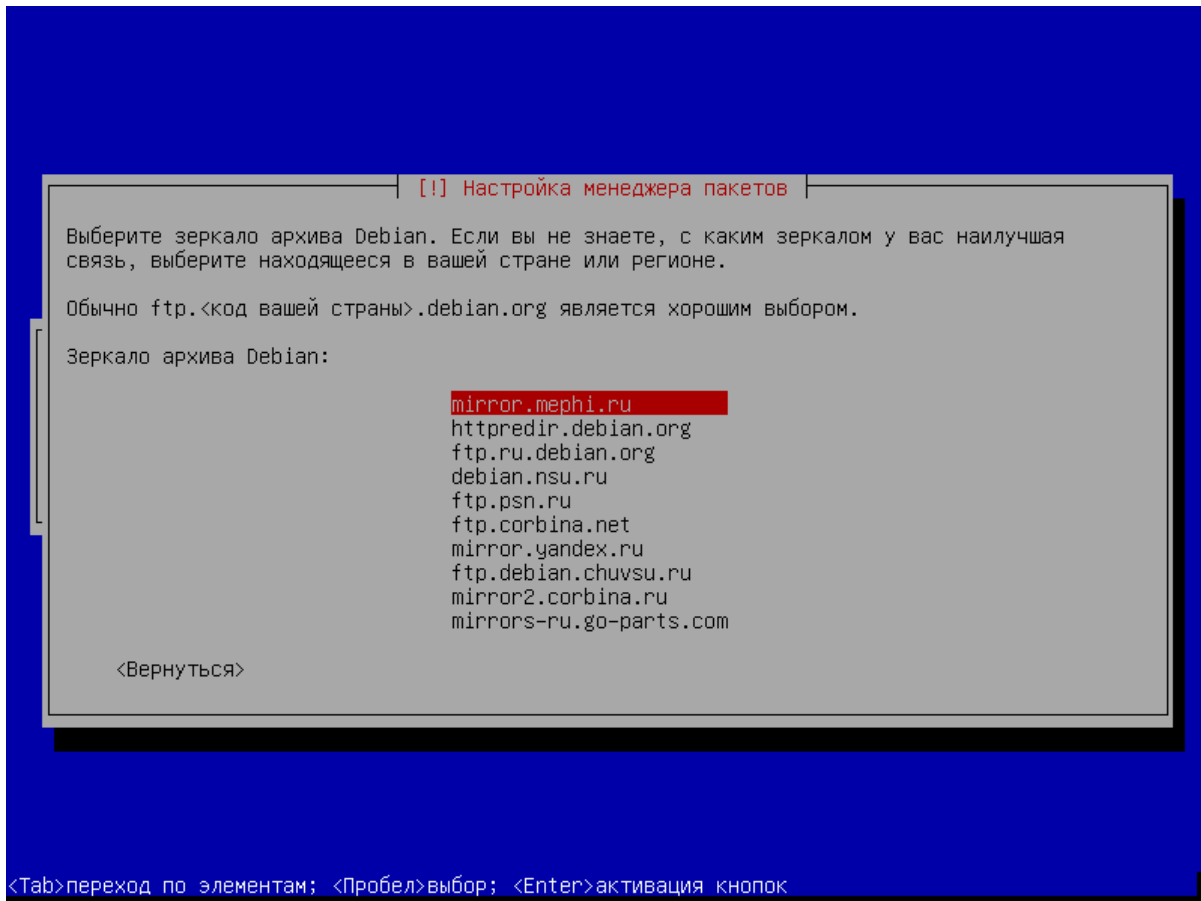


22. Не вводите никаких данных, касающихся HTTP-прокси, только выберите «Далее» и нажмите ENTER.

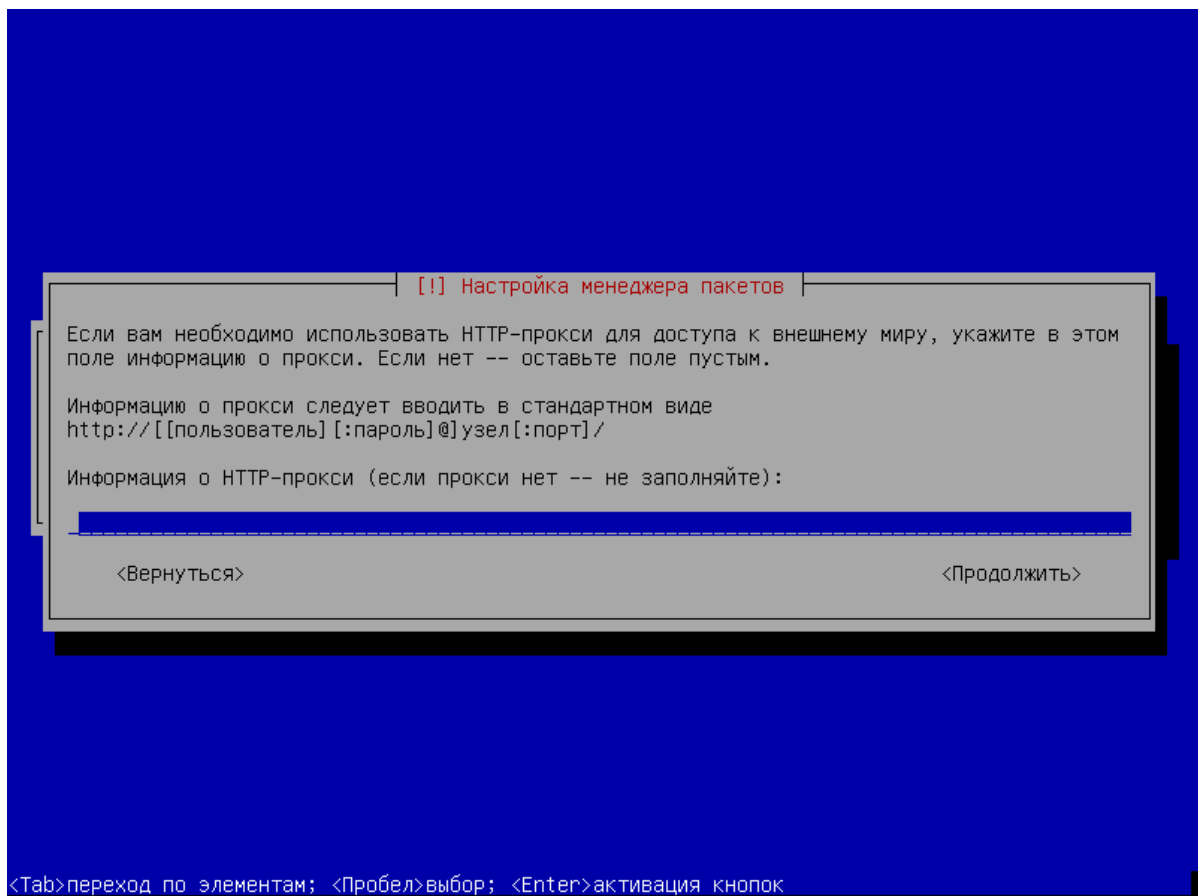


23. По очереди откроются окна, информирующие о прогрессе процесса установки.


24. Когда будет отображено окно «Настраивается пакет popularity-contest», выберите одну из доступных возможностей и нажмите ENTER.

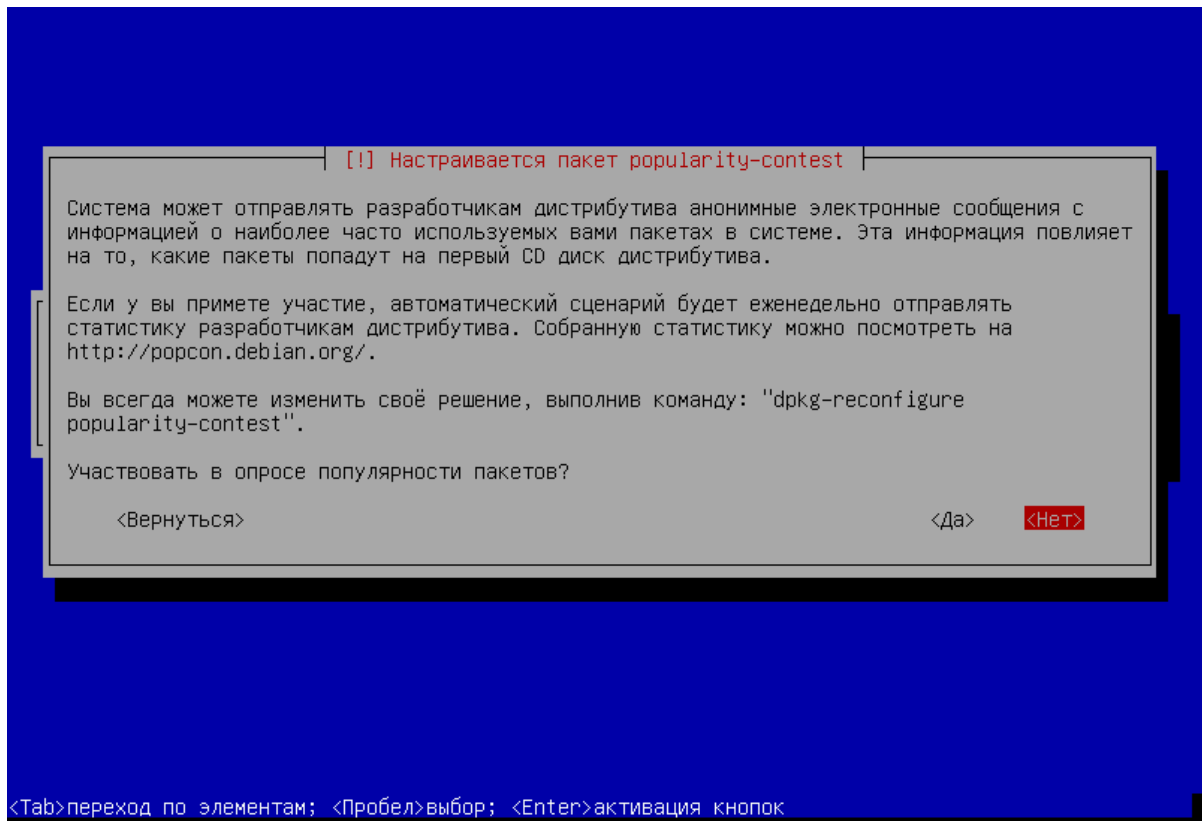


25. С помощью клавиши «пробел» выделите программное обеспечение, которое должно быть установлено: «SSH-сервер» и «Стандартные системные утилиты» (остальные поля не должны быть выделены). Затем нажмите ENTER.

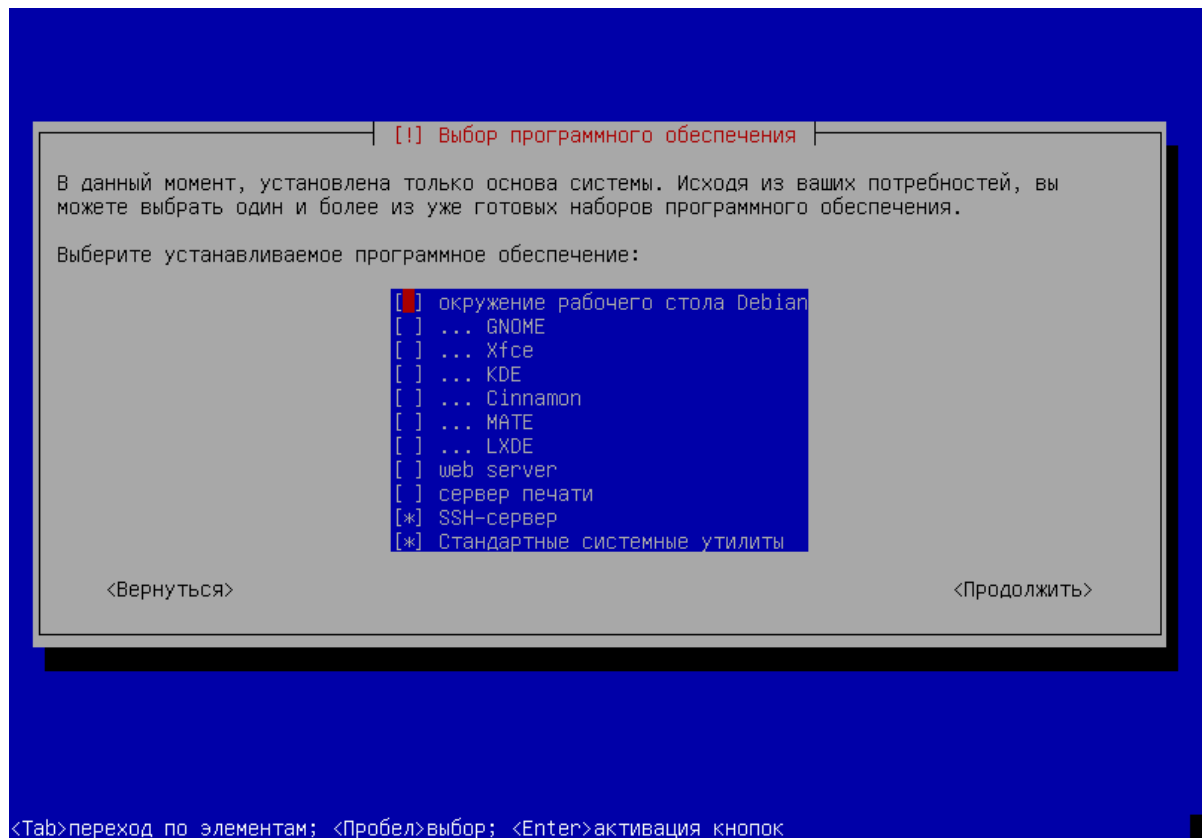


26. По очереди будут отображаться окна с информацией о прогрессе процесса установки.

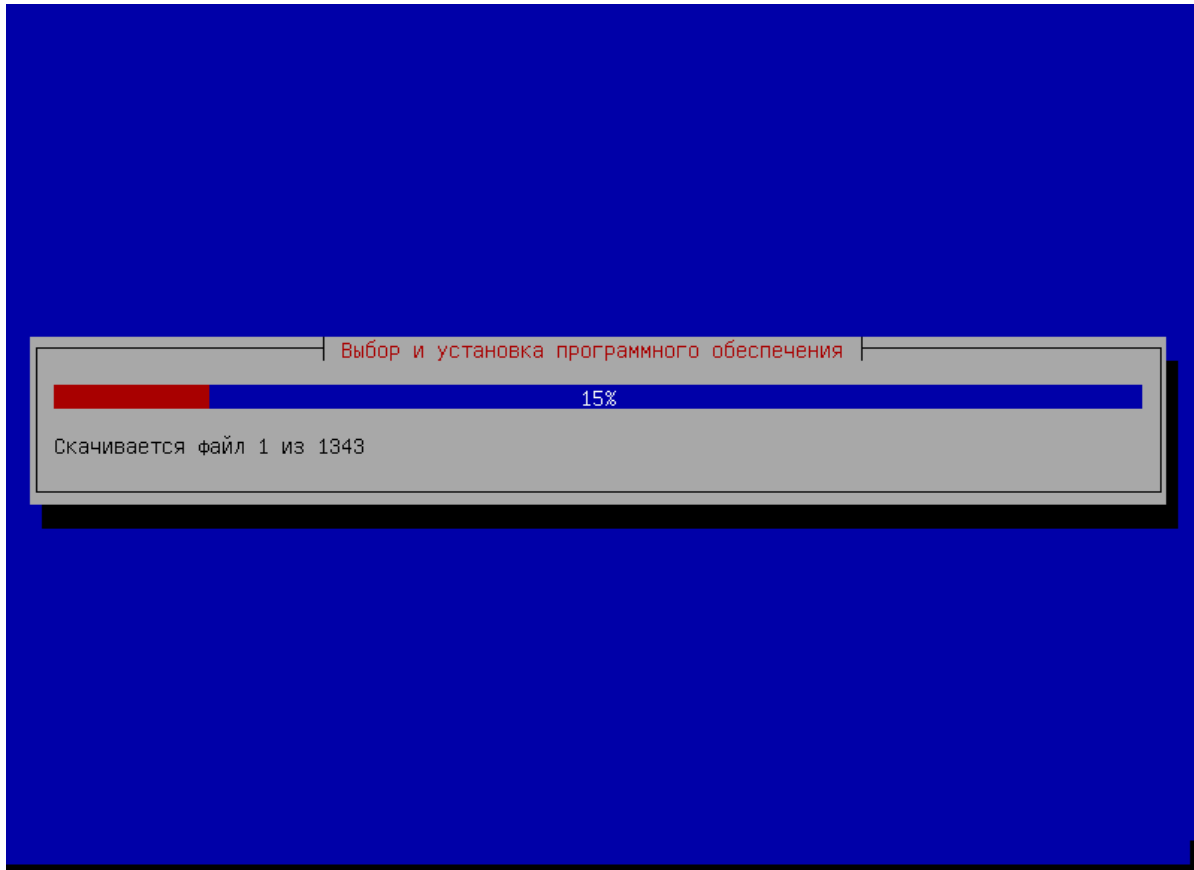


27. Когда появится вопрос об установке системного загрузчика GRUB, выберите «Да» и нажмите ENTER.

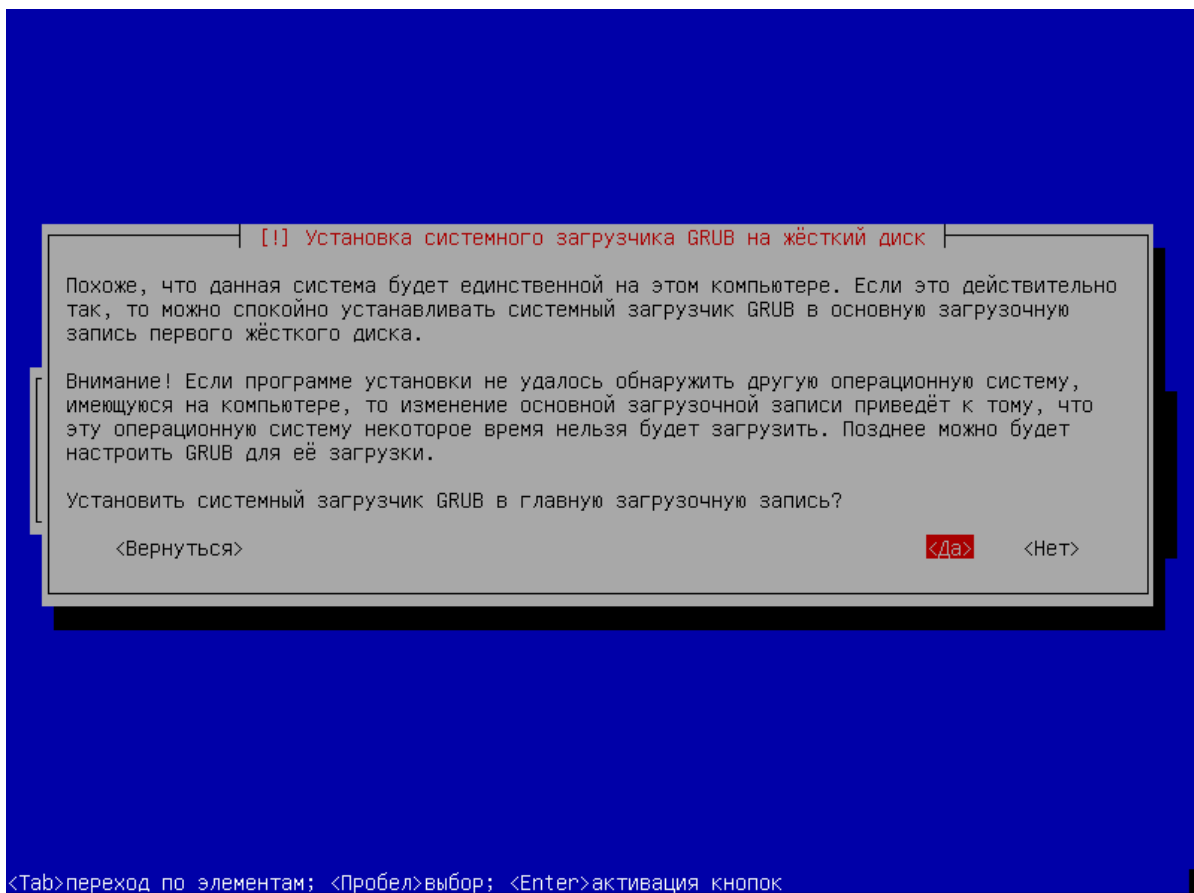

28. Задайте название главной загрузочной записи первого жесткого диска, на котором будет установлена программа-загрузчик GRUB и нажмите ENTER.

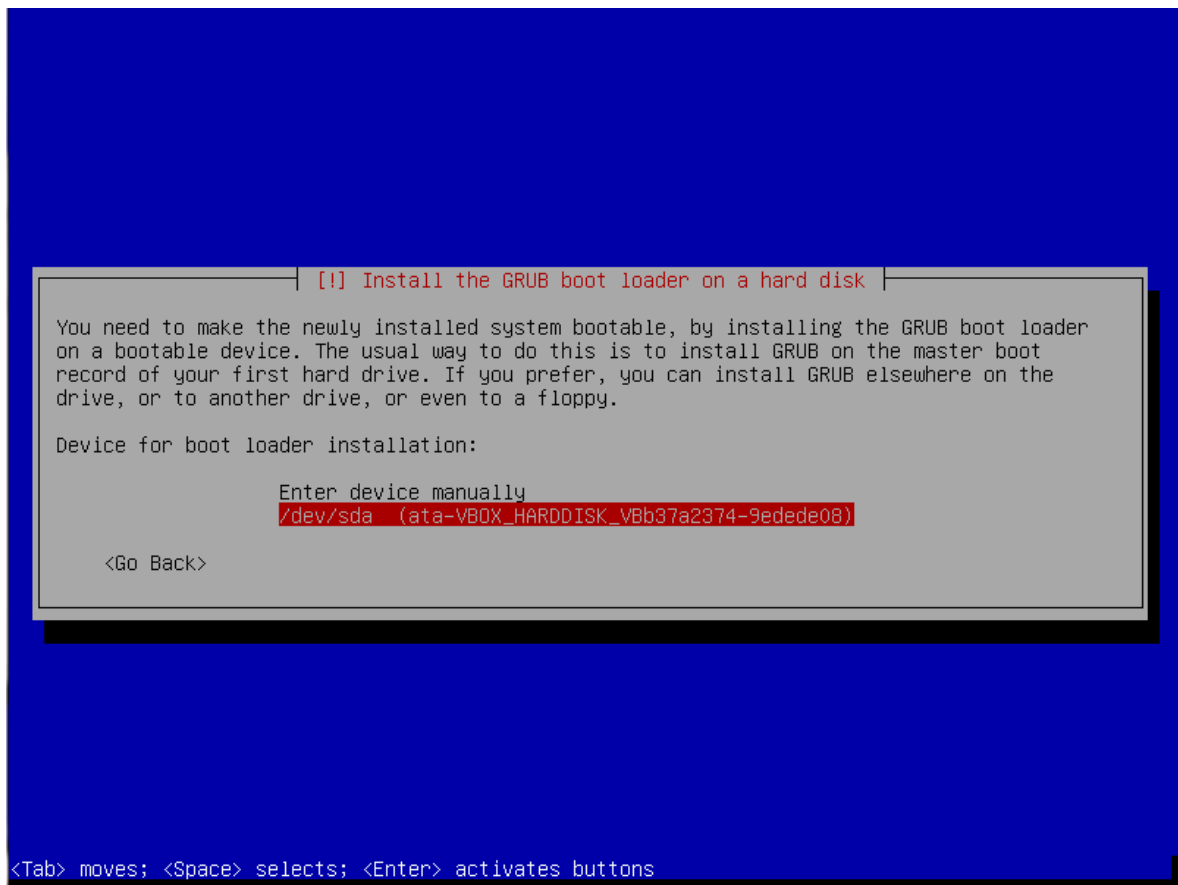

29. Когда будет отображена информация о завершении установки, нажмите ENTER. Система будет перезапущена.

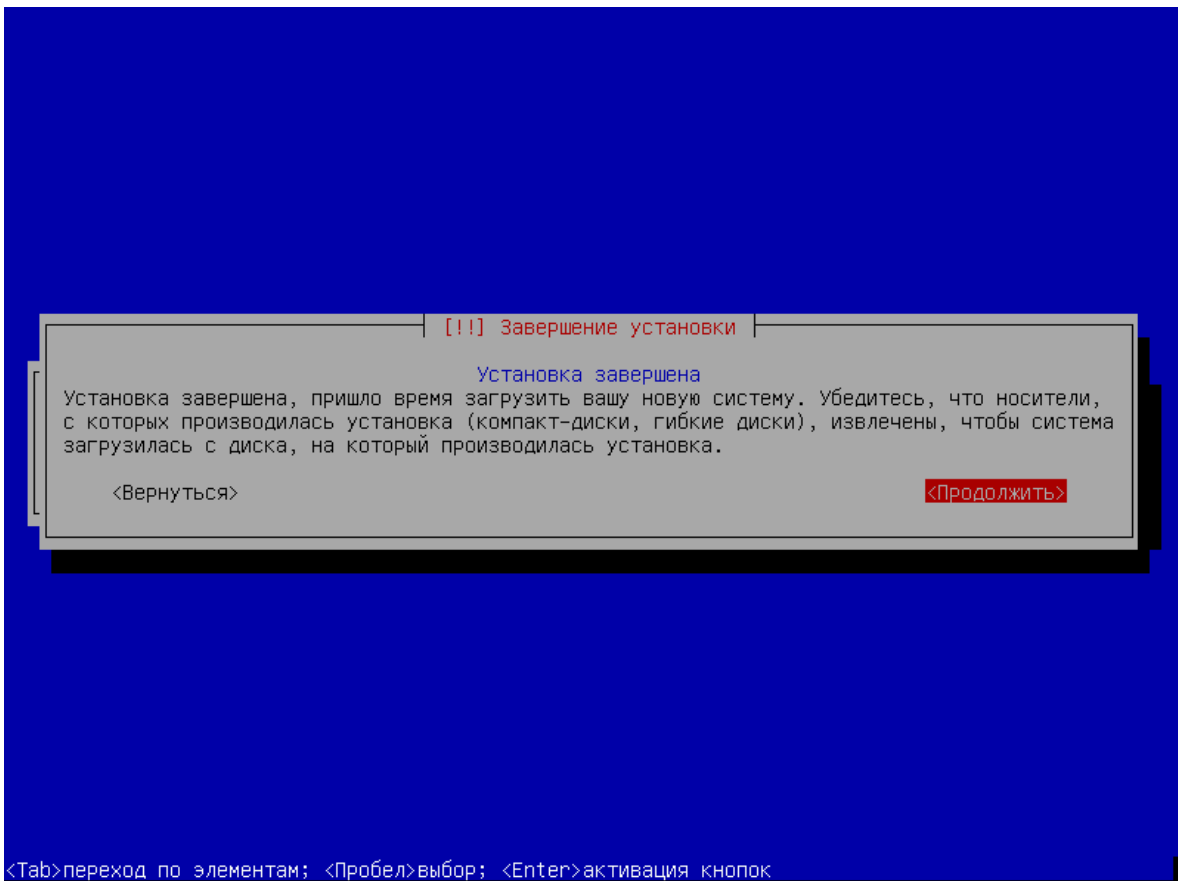

6.2 Установка серверной среды и системы ACCO NET

В открывшемся после перезапуска системы окне консоли можно начать установку системы ACCO NET.

1. Введите логин администратора (root) и нажмите ENTER.

```
Debian GNU/Linux 8 acco-server tty1
acco-server login: root
Password: _
```

2. Введите пароль администратора и нажмите ENTER.

```
Debian GNU/Linux 8 acco-server tty1
acco-server login: root
Password:
Last login: Wed May 20 15:27:16 CEST 2015 on tty1
Linux acco-server 3.16.0-4-586 #1 Debian 3.16.7-ckt9-3~deb8u1 (2015-04-24) i686

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
root@acco-server:~# _
```

3. Загрузите установочный пакет системы ACCO NET, вписав команду:

- для операционной системы Debian версии 8.0:
wget <http://updates.satel.pl/acco/install-debian-8.sh>
- для операционной системы Debian версии 7.6:
wget <http://updates.satel.pl/acco/install-debian-7.sh>

и нажмите ENTER.

```
acco-server login: root
Password:
Last login: Wed Jun 24 13:44:11 BST 2015 on tty1
Linux acco-server 3.16.0-4-586 #1 Debian 3.16.7-ckt11-1 (2015-05-24) i686

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
root@acco-server:~# wget http://updates.satel.pl/acco/install-debian-8.sh
--2015-06-24 13:48:10-- http://updates.satel.pl/acco/install-debian-8.sh
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 34393 (34K) [application/octet-stream]
Saving to: 'install-debian-8.sh'

install-debian-8.sh 100%[=====] 33.59K --.-KB/s in 0s
2015-06-24 13:48:10 (90.8 MB/s) - 'install-debian-8.sh' saved [34393/34393]

root@acco-server:~# _
```

4. Назначьте права запуска для установочного пакета, вписав команду:

– для операционной системы Debian версии 8.0:

chmod 755 install-debian-8.sh

– для операционной системы Debian версии 7.6:

chmod 755 install-debian-7.sh

и нажмите ENTER.

```
acco-server login: root
Password:
Last login: Wed Jun 24 13:44:11 BST 2015 on tty1
Linux acco-server 3.16.0-4-586 #1 Debian 3.16.7-ckt11-1 (2015-05-24) i686

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
root@acco-server:~# wget http://updates.satel.pl/acco/install-debian-8.sh
--2015-06-24 13:48:10-- http://updates.satel.pl/acco/install-debian-8.sh
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 34393 (34K) [application/octet-stream]
Saving to: 'install-debian-8.sh'

install-debian-8.sh 100%[=====] 33.59K --.-KB/s in 0s
2015-06-24 13:48:10 (90.8 MB/s) - 'install-debian-8.sh' saved [34393/34393]

root@acco-server:~# chmod 755 install-debian-8.sh
root@acco-server:~# _
```

5. Запустите установочный пакет, вписав команду:
- для операционной системы Debian версии 8.0:
./install-debian-8.sh
 - для операционной системы Debian версии 7.6:
./install-debian-7.sh
- И нажмите ENTER.

```
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
root@acco-server:~# wget http://updates.satel.pl/acco/install-debian-8.sh
--2015-06-24 13:48:10-- http://updates.satel.pl/acco/install-debian-8.sh
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 34393 (34K) [application/octet-stream]
Saving to: 'install-debian-8.sh'

install-debian-8.sh 100%[=====>] 33.59K --.-KB/s in 0s
2015-06-24 13:48:10 (90.8 MB/s) - 'install-debian-8.sh' saved [34393/34393]

root@acco-server:~# chmod 755 install-debian-8.sh
root@acco-server:~# ./install-debian-8.sh

Select language [default Polski]
 1) Polski
 2) English
```

6. С помощью клавиши с соответствующей цифрой выберите язык установки. Нажмите ENTER (если это должен быть язык по умолчанию, то можно сразу нажать ENTER).

```
2015-06-24 14:32:56 (86.3 MB/s) - 'install-debian-8.sh' saved [34393/34393]

root@acco-server:~# chmod 755 install-debian-8.sh
root@acco-server:~# ./install-debian-8.sh

Select language [default Polski]
 1) Polski
 2) English
2

Preparing the server environment required to install ACCO NET.
Checking the required elements of the environment...
* lack of Apache + (ModSecurity)
* lack of PHP
* lack of Fail2ban
* lack of openjdk-7-jre

Do you want to install the missing items?[Yes/No]
```

7. Решите на счет установки нехватяющих элементов среды, которые необходимы для установки ACCO NET. Если хотите их установить, нажмите Y., если нет, нажмите N и самостоятельно приготовьте систему к установке ACCO NET.
8. Будет отображена информация о прогрессе процесса установки.
9. Определите, должна ли SQL-база быть установлена локально или нет. Если она должна быть установлена локально, нажмите ENTER или Y. Если хотите, чтобы база данных была установлена на другом компьютере, нажмите N.

```

After this operation, 3,521 kB of additional disk space will be used.
Get:1 http://ftp.uk.debian.org/debian/ jessie/main libapache2-mod-security2 i386
 2.8.0-3 [240 kB]
Get:2 http://ftp.uk.debian.org/debian/ jessie/main libapache2-modsecurity all 2.
8.0-3 [30.4 kB]
Get:3 http://ftp.uk.debian.org/debian/ jessie/main modsecurity-crs all 2.2.9-1 [
223 kB]
Fetched 494 kB in 1s (423 kB/s)
Selecting previously unselected package libapache2-mod-security2.
(Reading database ... 33324 files and directories currently installed.)
Preparing to unpack .../libapache2-mod-security2_2.8.0-3_i386.deb ...
Unpacking libapache2-mod-security2 (2.8.0-3) ...
Selecting previously unselected package libapache2-modsecurity.
Preparing to unpack .../libapache2-modsecurity_2.8.0-3_all.deb ...
Unpacking libapache2-modsecurity (2.8.0-3) ...
Selecting previously unselected package modsecurity-crs.
Preparing to unpack .../modsecurity-crs_2.2.9-1_all.deb ...
Unpacking modsecurity-crs (2.2.9-1) ...
Setting up libapache2-mod-security2 (2.8.0-3) ...
apache2_invoke: Enable module security2
Setting up libapache2-modsecurity (2.8.0-3) ...
Setting up modsecurity-crs (2.2.9-1) ...

Shall SQL database be local? [Yes/No] [default Yes]:

```

10. Нажмите клавишу ENTER, чтобы открыть текст лицензионного договора к ACCO Server.

```

Shall SQL database be local? [Yes/No] [default Yes]: n

          ACCO SERVER

Ver:0.1.03042015
--2015-04-08 14:05:35-- http://updates.satel.pl/acco/ACCO_Server_license_EN.txt
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 6554 (6.4K) [application/octet-stream]
Saving to: `ACCO_Server_license_EN.txt'

100%[=====] 6,554  --.-K/s  in 0s

2015-04-08 14:05:35 (51.4 MB/s) - `ACCO_Server_license_EN.txt' saved [6554/6554]

License ACCO SERVER [ENTER]

```

11. Очередные части текста лицензионного договора к ACCO Server будут отображены после нажатия клавиши пробела.

LICENSE AGREEMENT

1) SATEL Sp. z o.o. (Licensor) hereby grants a non-exclusive license to use the ACCO Server software, hereinafter called the "Server Software", in the following field of use: installation and use of the Server Software for receiving and aggregating data from the access control system, designed on the basis of the ACCO-NET Access Control Panel, hereinafter called the Control Panel.

2) The License is granted to each-time owner of the Control Panel. The granted License shall not be transferred in any form, including the sublicense, lease or rent to third parties otherwise than with the transfer of the title of ownership of the Control Panel.

3) The ACCO Server Software may only be installed on one computer.

4) The Licensor may make updates of the Server Software available to the Licensee, provided that such updates are created.

The Licensee shall not make any claims relating to the Licensor to create the Server Software updates and/or upgrades.

The updates and upgrades shall be made available to the Licensee pursuant to the course of work and commercial policy of the Licensor.

5) The Server Software shall be delivered in the form of a computer-readable result code, and it may be used in such a form only. In particular, the Licensee is not authorized to:

5.1) disassemble, de-compile, translate or attempt to otherwise reengineer the source code of the Server Software, or create any derivative Server Software or parts thereof, even if such actions result from the intention to correct errors of ACCO_Server_license_EN.txt.

12. Подтвердите (нажав Y) условия лицензионного договора ACCO Server.

copy may not be used simultaneously with the Server Software installed.

When making the backup copy, the Licensee shall be obliged to reproduce on that copy the Licensor's copyrights and other relevant descriptions that were placed on the original Server Software. The Licensee is entitled to make copies of the user documentation. This provision shall not affect the Licensee's rights under Art. 75 of the Act of 4 February 1994 on copyright and related rights.

13) The Licensee shall make every effort in order to prevent the Licensor's rights from being violated.

14) The Licensor shall have the right to terminate the license granted to the Licensee in the event of a breach by the Licensee of these terms and conditions of the license. In the event of termination of the license by the Licensor, the Licensee shall be obliged to immediately remove the owned Server Software carriers, and remove the Server Software from the computer memory, as well as the backup copy of the Server Software.

15) All statements, notices and notifications made by the Parties, shall only be made in writing. If made in any other form, the notices and statements shall be of no legal or factual consequence.

16) These license terms and conditions constitute an exclusive basis for the rights and obligations of the Parties to the extent of the subject thereof and supersede all prior agreements and arrangements of the Parties in this regard.

17) The applicable law shall be the Polish law. The competent court for the settlement of disputes shall be the court in Gdańsk.

18) Installation of the Server Software shall mean acceptance of the terms and conditions of this Agreement by the Licensee.

Agree and proceed [[Yes/No]_

13. Нажмите клавишу ENTER, чтобы открыть текст лицензионного договора к ACCO-WEB.

```
of no legal or factual consequence.
16) These license terms and conditions constitute an exclusive basis for the rights and obligations of the Parties to the extent of the subject thereof and supersede all prior agreements and arrangements of the Parties in this regard.
17) The applicable law shall be the Polish law. The competent court for the settlement of disputes shall be the court in Gdańsk.
18) Installation of the Server Software shall mean acceptance of the terms and conditions of this Agreement by the Licensee.
  Agree and proceed [[Yes/No]y

--2015-04-08 14:27:16-- http://updates.satel.pl/acco/ACCO_WEB_license_EN.txt
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 4021 (3.9K) [application/octet-stream]
Saving to: `ACCO_WEB_license_EN.txt'

100%[=====>] 4,021      --.-K/s   in 0s

2015-04-08 14:27:17 (32.3 MB/s) - `ACCO_WEB_license_EN.txt' saved [4021/4021]

License ACCO-WEB [ENTER]
```

14. Очередные части текста лицензионного договора к ACCO-WEB будут отображены после нажатия клавиши пробела.

```
LICENSE AGREEMENT

1) SATEL Sp. z o.o. (Licensor) hereby grants an unlimited and non-exclusive license to use the internet application ACCO Web, hereinafter called "Application", in the following field of use: using the Application for the sole purpose of managing permissions and monitoring the status of the system designed on the basis of the ACCO-NT Access Control Panel, hereinafter called the "Control Panel".
2) The License is granted to each-time owner of the Control Panel. The granted License shall not be transferred in any form, including the sublicense, lease or rent to third parties otherwise than with the transfer of the title of ownership of the Control Panel.
3) The Licensor undertakes to make updates of the Application (developed upgrades and enhancements) available to the Licensee. The Licensee shall not make any claims relating to the Licensor to create the Application updates and/or upgrades. The updates and upgrades shall be made available to the Licensee pursuant to the course of work and commercial policy of the Licensor.
4) Application shall be delivered in the form of a computer-readable result code, and it may be used in such a form only.
In particular, the Licensee is not authorized to:
a) disassemble, de-compile, translate or attempt to otherwise reengineer the source code of the Application, or create any derivative Application or parts thereof, even if such actions result from the intention to correct errors or launch disabled Application;
b) remove, change or cover the copyright information and/or intellectual property information of the Application.

ACCO_WEB_license_EN.txt
```

15. Подтвердите (нажав Y) условия лицензионного договора ACCO-WEB.

```
s, except for the warranty for legal defects. In particular, the Licensor bears no responsibility for any damage or errors caused by the Application, both direct and consequential, loss of profit, etc.. Specifically, the Licensor does not guarantee that the Application will operate correctly under all circumstances. Furthermore, the Licensor gives no guarantee regarding merchantability or fitness to a particular purpose.
6) The Licensee shall take into account that this Agreement does not make him the owner, or grant him any title to the Application or any other patents, copyrights, trademarks, or other intellectual or industrial property rights related thereto, except for the rights under the granted license.
7) The Licensor shall retain the title of ownership and the copyrights to all the Application copies recorded on the original carriers, and to the subsequent Application copies made in any time whatsoever, irrespective of the form or carriers on which the original and/or other copies may have been recorded.
8) This License is not a sale of the original or any subsequent copy of the Application. This License shall not transfer upon the Licensee the title of ownership of the Application or the copyright to the Application, but only a limited right to the use thereof.
9) The Licensee shall make every effort in order to prevent the Licensor's rights from being violated.
10) Installation of the Application shall mean acceptance of this Agreement by the Licensee.

Agree and proceed [[Yes/No]_
```

16. Когда будет отображен список программного обеспечения системы ACCO NET, которое должно быть на этом этапе установлено, нажмите ENTER. Процесс установки займет некоторое время.

```
ication. This License shall not transfer upon the Licensee the title of ownership of the Application or the copyright to the Application, but only a limited right to the use thereof.
9) The Licensee shall make every effort in order to prevent the Licensor's rights from being violated.
10) Installation of the Application shall mean acceptance of this Agreement by the Licensee.

Agree and proceed [[Yes/No]y

The installation consists of two stages:...
Downloaded and installed will be 2 packages:
- acco-server.tar.gz (11M)
- accoweb.tar.gz (61M)

Downloaded will be 4 packages:
acco-conf.exe (764K)
acco-conf.tar.gz (504K)
acco-soft.exe (14M)
acco-soft.tar.gz (14M)

Press [Enter] to continue.
```

17. Если раньше Вы решили, что SQL-база должна быть установлена локально, то настройте ее. Впишите адрес компьютера, на котором будет установлена база данных, и нажмите ENTER. Адрес может быть введен в виде IP-адреса (4 десятичных числа, разделенных точками) или названия.

```
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 12049015 (11M) [application/octet-stream]
Saving to: `acco-server.tar.gz'

100%[=====>] 12,049,015  14.2M/s   in 0.8s
2015-04-08 15:44:34 (14.2 MB/s) - `acco-server.tar.gz' saved [12049015/12049015]

--2015-04-08 15:44:35-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  20.0K/s   in 24s
2015-04-08 15:45:01 (1.04 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

* Database configuration
Enter host [default localhost]: _
```

18. Впишите номер порта для связи между ACCO Server и базой данных (DB-порт) и нажмите ENTER.

```
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 12049015 (11M) [application/octet-stream]
Saving to: `acco-server.tar.gz'

100%[=====>] 12,049,015  14.2M/s   in 0.8s
2015-04-08 15:44:34 (14.2 MB/s) - `acco-server.tar.gz' saved [12049015/12049015]

--2015-04-08 15:44:35-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  20.0K/s   in 24s
2015-04-08 15:45:01 (1.04 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

* Database configuration
Enter host [default localhost]:
Enter port [default 3306]: _
```

19. Введите логин администратора (root) или пользователя с полномочиями администратора, у которого будет доступ к базе данных, и нажмите ENTER.

```
HTTP request sent, awaiting response... 200 OK
Length: 12049015 (11M) [application/octet-stream]
Saving to: `acco-server.tar.gz'

100%[=====>] 12,049,015  14.2M/s   in 0.8s

2015-04-08 15:44:34 (14.2 MB/s) - `acco-server.tar.gz' saved [12049015/12049015]

--2015-04-08 15:44:35-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  20.0K/s   in 24s

2015-04-08 15:45:01 (1.04 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

* Database configuration

Enter host [default localhost]:
Enter port [default 3306]:
Enter login [default root]:
```

20. Введите пароль администратора или пользователя с полномочиями администратора, у которого будет доступ к базе данных, и нажмите ENTER.

```
Length: 12049015 (11M) [application/octet-stream]
Saving to: `acco-server.tar.gz'

100%[=====>] 12,049,015  14.2M/s   in 0.8s

2015-04-08 15:44:34 (14.2 MB/s) - `acco-server.tar.gz' saved [12049015/12049015]

--2015-04-08 15:44:35-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  20.0K/s   in 24s

2015-04-08 15:45:01 (1.04 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

* Database configuration

Enter host [default localhost]:
Enter port [default 3306]:
Enter login [default root]:
Enter database password:
```

21. Назначьте название базе данных и нажмите ENTER.

```
Saving to: `acco-server.tar.gz`
100%[=====>] 12,049,015 14.2M/s in 0.8s
2015-04-08 15:44:34 (14.2 MB/s) - `acco-server.tar.gz` saved [12049015/12049015]
--2015-04-08 15:44:35-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz`

100%[=====>] 26,692,939 20.0K/s in 24s
2015-04-08 15:45:01 (1.04 MB/s) - `accoweb.tar.gz` saved [26692939/26692939]

* Database configuration

Enter host [default localhost]:
Enter port [default 3306]:
Enter login [default root]:
Enter database password: satel
Enter database name [default accoDb]:
```

22. Нажав клавишу с соответствующей цифрой, выберите IP-адрес компьютера, на котором будет установлено ПО ACCO Server. Нажмите ENTER.

```
100%[=====>] 12,049,015 16.3M/s in 0.7s
2015-04-08 16:03:04 (16.3 MB/s) - `acco-server.tar.gz` saved [12049015/12049015]
--2015-04-08 16:03:05-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz`

100%[=====>] 26,692,939 15.9M/s in 1.6s
2015-04-08 16:03:30 (15.9 MB/s) - `accoweb.tar.gz` saved [26692939/26692939]

MySQL U: accoweb
MySQL H: 9b9e0d4e3928f1cf1dfd64a283744305

* Server access

Server IP:
1. 10.0.2.15
2. 192.168.1.146
IP:
```

23. Впишите номер порта для связи между ACCO Server и сетевыми контроллерами ACCO-NT и нажмите ENTER.

```

2015-04-08 16:03:04 (16.3 MB/s) - `acco-server.tar.gz' saved [12049015/12049015]
--2015-04-08 16:03:05-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  15.9M/s  in 1.6s
2015-04-08 16:03:30 (15.9 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

MySQL U: accoweb
MySQL H: 9b9e0d4e3928f1cf1dfd64a283744305

* Server access

Server IP:
1. 10.0.2.15
2. 192.168.1.146
LP: 1
* 10.0.2.15
Port (AccoNT) [default 8999]:_

```

24. Впишите номер порта для связи между ACCO Server и программой ACCO Soft (порт RMI) и нажмите ENTER.

```

2015-04-08 16:03:04 (16.3 MB/s) - `acco-server.tar.gz' saved [12049015/12049015]
--2015-04-08 16:03:05-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  15.9M/s  in 1.6s
2015-04-08 16:03:30 (15.9 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

MySQL U: accoweb
MySQL H: 9b9e0d4e3928f1cf1dfd64a283744305

* Server access

Server IP:
1. 10.0.2.15
2. 192.168.1.146
LP: 1
* 10.0.2.15
Port (AccoNT) [default 8999]:_
Port (acco-soft) [default 2500]:_

```

25. Впишите номер порта для связи между ACCO Server и программой ACCO-WEB и нажмите ENTER.

```
--2015-04-08 16:03:05-- http://updates.satel.pl/acco/accoweb.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 26692939 (25M) [application/octet-stream]
Saving to: `accoweb.tar.gz'

100%[=====>] 26,692,939  15.9M/s  in 1.6s
2015-04-08 16:03:30 (15.9 MB/s) - `accoweb.tar.gz' saved [26692939/26692939]

MySQL U: accoweb
MySQL H: 9b9e0d4e3928f1cf1dfd64a283744305

* Server access

Server IP:
1. 10.0.2.15
2. 192.168.1.146
LP: 1
* 10.0.2.15
Port (AccoNT) [default 8999]:
Port (acco-soft) [default 2500]:
Port (acco-web) [default 2501]:_
```

26. Будет отображена информация о прогрессе процесса установки.

27. Задайте настройки SSL-сертификата для соединения с веб-сервером. Впишите двухзначных код страны и нажмите ENTER.

```
INFO: The current configuration will be overwritten
Is configure modsecurity? [Yes/No]yconfigurationModSecurity
Enabling module ssl.
See /usr/share/doc/apache2.2-common/README.Debian.gz on how to configure SSL and
create self-signed certificates.
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:_
```

28. Впишите название региона и нажмите ENTER.

```
INFO: The current configuration will be overwritten
Is configure modsecurity? [Yes/No]yconfigurationModSecurity
Enabling module ssl.
See /usr/share/doc/apache2.2-common/README.Debian.gz on how to configure SSL and
create self-signed certificates.
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
```

29. Впишите название локализации (например, города) и нажмите ENTER.

```
Is configure modsecurity? [Yes/No]yconfigurationModSecurity
Enabling module ssl.
See /usr/share/doc/apache2.2-common/README.Debian.gz on how to configure SSL and
create self-signed certificates.
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
Locality Name (eg, city) []:
```


30. Впишите название компании и нажмите ENTER.

```
Enabling module ssl.
See /usr/share/doc/apache2.2-common/README.Debian.gz on how to configure SSL and
create self-signed certificates.
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
Locality Name (eg, city) []:
Organization Name (eg, company) [Internet Widgits Pty Ltd]:_
```

31. Впишите название отдела компании и нажмите ENTER.

```
See /usr/share/doc/apache2.2-common/README.Debian.gz on how to configure SSL and
create self-signed certificates.
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
Locality Name (eg, city) []:
Organization Name (eg, company) [Internet Widgits Pty Ltd]:
Organizational Unit Name (eg, section) []:_
```

32. Впишите название компьютера, на котором будет установлена программа ACCO Server, и нажмите ENTER.

```
create self-signed certificates.
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
Locality Name (eg, city) []:
Organization Name (eg, company) [Internet Widgits Pty Ltd]:
Organizational Unit Name (eg, section) []:
Common Name (e.g. server FQDN or YOUR name) []:
```

33. Впишите адрес электронной почты и нажмите ENTER.

```
To activate the new configuration, you need to run:
  service apache2 restart
[ ok ] Restarting web server: apache2 ... waiting .

* SSL configuration for WWW server

Generating a 2048 bit RSA private key
.....+++
.....+++
writing new private key to '/etc/apache2/ssl/apache.key'
-----
You are about to be asked to enter information that will be incorporated
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
Locality Name (eg, city) []:
Organization Name (eg, company) [Internet Widgits Pty Ltd]:
Organizational Unit Name (eg, section) []:
Common Name (e.g. server FQDN or YOUR name) []:
Email Address []:
```

34. Будет отображена информация о прогрессе процесса установки, затем о завершении установки и о запуске программы ACCO Server.

```
into your certificate request.
What you are about to enter is what is called a Distinguished Name or a DN.
There are quite a few fields but you can leave some blank
For some fields there will be a default value,
If you enter '.', the field will be left blank.
-----
Country Name (2 letter code) [AU]:
State or Province Name (full name) [Some-State]:
Locality Name (eg, city) []:
Organization Name (eg, company) [Internet Widgits Pty Ltd]:
Organizational Unit Name (eg, section) []:
Common Name (e.g. server FQDN or YOUR name) []:
Email Address []:
preparation /etc/apache2/sites-enabled/acco-server-ssl.conf
Enabling site default-ssl.
To activate the new configuration, you need to run:
  service apache2 reload
[ ok ] Restarting web server: apache2 ... waiting .
Starting acco-server

Successfully

root@acco-server:~#
```

6.3 Установка программы ACCO-NT Conf / ACCO Soft

1. Запустите интернет-браузер. Впишите адрес: [https://\[адрес компьютера, на котором установлено ПО ACCO Server\]](https://[адрес компьютера, на котором установлено ПО ACCO Server]) и зарегистрируйтесь в приложение ACCO-WEB как Администратор (по умолчанию: логин «admin» и пароль «admin»).
2. Кликните по запросу «Программы» в меню с левой стороны экрана. Будут отображены ссылки к установочным файлам программ ACCO-NT Conf и ACCO Soft.
3. Перейдите по выбранной ссылке, чтобы установить требуемую программу.

7. Настройка

В окне консоли можете настроить установки ACCO Server, программы ACCO Soft и приложения ACCO-WEB.

7.1 ACCO Server и программа ACCO Soft

Если хотите отобразить содержание конфигурационного файла ACCO Server и программы ACCO Soft, то впишите в окне консоли следующую команду:

```
cat /etc/acco/server.conf
```

и нажмите ENTER.

Если хотите редактировать содержание этого конфигурационного файла, впишите команду:

```
nano /etc/acco/server.conf
```

и нажмите ENTER.

Ниже представлено содержание конфигурационного файла ACCO Server и программы ACCO Soft на примере системы ACCO NET, представленной на рис. 1. В квадратных скобках указаны значения отдельных строк.

dbhost=192.168.1.30	[IP-адрес / название компьютера, на котором установлена база данных]
dbname=accoDb	[название базы данных]
dbuser=accoweb	[название пользователя, которому предоставлен доступ к базе данных]
dbpassword=1db4e9f4e7d6ea6366b64e3becb6314d	[пароль пользователя, которому предоставлен доступ к базе данных]
dbport=3306	[номер порта в сети (DB-порт) для осуществления связи между ACCO Server и базой данных]
serverport=8999	[номер порта в сети для осуществления связи между ACCO Server и сетевым контроллером ACCO-NT]
rmipublichost=192.168.1.30	[внешний IP-адрес / название компьютера, на котором установлено ПО ACCO Server]
rmiport=2500	[номер порта в сети (RMI-порт) для осуществления связи между ACCO Server и программой ACCO Soft]
rmiport_www=INET:2501	[номер порта в сети для осуществления связи между ACCO Server и приложением ACCO-WEB]

7.2 Приложение ACCO-WEB

Если хотите отобразить содержание конфигурационного файла приложения ACCO-WEB, впишите в окне консоли следующую команду:

- для операционной системы Debian версии 8.0:
cat /var/www/html/satel/protected/config/servers.php
- для операционной системы Debian версии 7.6:
cat /var/www/satel/protected/config/servers.php

и нажмите ENTER.

Если хотите редактировать содержание этого конфигурационного файла, впишите команду:

- для операционной системы Debian версии 8.0:
nano /var/www/html/satel/protected/config/servers.php
- для операционной системы Debian версии 7.6:
nano /var/www/satel/protected/config/servers.php

и нажмите ENTER.

Ниже представлено содержание конфигурационного файла приложения ACCO-WEB на примере системы ACCO NET, представленной на рис. 1. В квадратных скобках указаны значения отдельных строк.

const DATABASE_NAME = 'accoDb'	[название базы данных]
const DATABASE_IP = 'localhost'	[IP-адрес / название компьютера, на котором установлена база данных]
const DATABASE_USER = 'accoweb'	[название пользователя, которому предоставлен доступ к базе данных]

const DATABASE_PASSWORD = '1db4e9f4e7d6ea6366b64e3becb6314d'	[пароль пользователя, которому предоставлен доступ к базе данных]
const RMI_IP = '192.168.1.30'	[IP-адрес / название компьютера, на котором установлено ПО ACCO Server]
const RMI_PORT = '2501'	[номер порта в сети для осуществления связи между ACCO Server и приложением ACCO-WEB]

7.3 Полезные команды

Управление системой ACCO NET могут облегчить команды, вписываемые в окне консоли (после ввода команды нажмите ENTER):

- Проверка состояния программы ACCO Server:
service acco-server status
- Приостановление программы ACCO Server:
service acco-server stop
- Запуск программы ACCO Server:
service acco-server start
- Проверка текущих версий установленных программ (ACCO Server, ACCO-WEB):
 - для операционной системы Debian версии 8.0:
./install-debian-8.sh version
 - для операционной системы Debian версии 7.6:
./install-debian-7.sh version

8. Обновление программного обеспечения системы ACCO NET

1. В окне консоли зарегистрируйтесь как администратор (login: root).
2. Введите последовательность команд:
 - для операционной системы Debian версии 8.0:
rm install-debian-8.sh ; wget http://updates.satel.pl/acco/install-debian-8.sh ; chmod 755 install-debian-8.sh ; ./install-debian-8.sh update
 - для операционной системы Debian версии 7.6:
rm install-debian-7.sh ; wget http://updates.satel.pl/acco/install-debian-7.sh ; chmod 755 install-debian-7.sh ; ./install-debian-7.sh update

и нажмите ENTER.

```
Debian GNU/Linux 8 acco-server tty1
acco-server login: root
Password:
Last login: Thu Jun 25 14:00:34 BST 2015 on tty1
Linux acco-server 3.16.0-4-586 #1 Debian 3.16.7-ckt11-1 (2015-05-24) i686

The programs included with the Debian GNU/Linux system are free software;
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
root@acco-server:~# rm install-debian-8.sh ; wget http://updates.satel.pl/acco/i
ninstall-debian-8.sh ; chmod 755 install-debian-8.sh ; ./install-debian-8.sh updat
e_
```

3. С помощью клавиши с соответствующей цифрой выберите язык установки. Нажмите ENTER (если это должен быть язык по умолчанию, то можно сразу нажать ENTER).

```
the exact distribution terms for each program are described in the
individual files in /usr/share/doc/*/copyright.

Debian GNU/Linux comes with ABSOLUTELY NO WARRANTY, to the extent
permitted by applicable law.
root@acco-server:~# rm install-debian-8.sh ; wget http://updates.satel.pl/acco/i
ninstall-debian-8.sh ; chmod 755 install-debian-8.sh ; ./install-debian-8.sh updat
e
--2015-06-25 14:14:02-- http://updates.satel.pl/acco/install-debian-8.sh
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 34393 (34K) [application/octet-stream]
Saving to: 'install-debian-8.sh'

install-debian-8.sh 100%[=====>] 33.59K --.-KB/s in 0s
2015-06-25 14:14:02 (118 MB/s) - 'install-debian-8.sh' saved [34393/34393]

Select language [default Polski]
 1) Polski
 2) English
```

4. Будет отображена информация о текущей и новой версии приложения ACCO-WEB. Кликните Y, чтобы обновить приложение.

```
root@acco-server:~# rm install-debian-8.sh ; wget http://updates.satel.pl/acco/i
ninstall-debian-8.sh ; chmod 755 install-debian-8.sh ; ./install-debian-8.sh updat
e
--2015-06-25 14:14:02-- http://updates.satel.pl/acco/install-debian-8.sh
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 34393 (34K) [application/octet-stream]
Saving to: 'install-debian-8.sh'

install-debian-8.sh 100%[=====] 33.59K --.-KB/s in 0s
2015-06-25 14:14:02 (118 MB/s) - 'install-debian-8.sh' saved [34393/34393]

Select language [default Polski]
 1) Polski
 2) English
2
Update ACCO WEB
The new version: 0.505
Your version: 0.504
Do You want to update the software? [Yes/No]
```

5. Будет отображена информация о текущей и новой версии ACCO Server. Кликните Y, чтобы обновить ACCO Server.

```
Successfully

check Acco-Server ...

--2015-06-25 14:18:47-- http://updates.satel.pl/acco/acco-server.tar.gz
Resolving updates.satel.pl (updates.satel.pl)... 188.252.21.2
Connecting to updates.satel.pl (updates.satel.pl)|188.252.21.2|:80... connected.
HTTP request sent, awaiting response... 200 OK
Length: 12049015 (11M) [application/octet-stream]
Saving to: 'acco-server.tar.gz'

acco-server.tar.gz 100%[=====] 11.49M 21.1MB/s in 0.5s
2015-06-25 14:19:05 (21.1 MB/s) - 'acco-server.tar.gz' saved [12049015/12049015]

Update ACCO SERVER
The new version: 1.08.229
Your version: 1.08.228
Do You want to update the software? [Yes/No]
```

6. После обновления ACCO-WEB и ACCO Server, можно обновить программы ACCO-NT Conf и ACCO Soft. Для этой цели запустите интернет-браузер.
7. Впишите адрес: [https://\[адрес компьютера, на котором установлена программа ACCO Server\]](https://[адрес компьютера, на котором установлена программа ACCO Server]).
8. Зарегистрируйтесь в приложение ACCO-WEB как Администратор (по умолчанию: логин «admin» и пароль «admin»).

9. В меню с левой стороны экрана кликните по позиции «Программы». Будут отображены ссылки к установочным файлам.
10. Загрузите обновленные установочные файлы.